

*Note: We are enhancing our systems and you may notice duplicate entries/missing/outdated data. During this interim period, please contact our Customer Service at <https://www.ul.com/about/locations>.*

# Motor Controllers, Mechanically Operated and Solid-state - Component

**COMPANY****LITTELFUSE INC**

6133 N. River Rd, Suite 500  
Rosemont, IL 60018 United States

**E121151**

Marking: Company name and model designation.

Note: For additional marking information, refer to the [Guide Information Page](#)

*View model for additional information*

**Electronics motor controllers**, Model(s): [GVT43C2](#), [GWT43C2](#)

**Motor speed controllers**, Model(s): [Y2679](#), [Y2689](#)

**Solid state relays**, Model(s): [HRDB230A-3921](#), [HRDI230A-4121](#), [HRDR120A-3819](#), [HRVI20A-3593](#), [OWTU-4410](#)

**Solid state relays**, Model(s): [HLV](#) followed by A, followed by 4 or 6, followed by I or N, followed by 2, followed by 1 to 20. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRD3](#) followed by 1, 2, 3, 4, 6, A, D, U or W, followed by 1, 2 or 3, may be followed by 0 thru 1000, may be followed by M or S, may be followed by A or X, followed by 0 thru 4, followed by A or B. May be followed by suffix PC and any number between 1 and 10,000 inclusive. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRDB](#) followed by 1, 2, 3, 4, 6, A, D, U or W, followed by 1, 2 or 3, may be followed by 0 thru 1000, may be followed by M or S, may be followed by A or X, followed by 0 thru 4. May be followed by suffix PC and any number between 1 and 10,000 inclusive. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRDI](#) followed by 1, 2, 3, 4, 6, A, D, U or W, followed by 1, 2 or 3, may be followed by 0 thru 1000, may be followed by M or S, may be followed by A or X, followed by 0 thru 4. May be followed by suffix PC and any number between 1 and 10,000 inclusive. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRDM](#) followed by 1, 2, 3, 4, 6, A, D, U or W, followed by 1, 2 or 3, may be followed by 0 thru 1000, may be followed by M or S, may be followed by A or X, followed by 0 thru 4. May be followed by suffix PC and any number between 1 and 10,000 inclusive. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRDR](#) followed by 1, 2, 3, 4, 6, A, D, U or W, followed by 1, 3, 4 or 5, followed by 0 thru 5, followed by A or B, followed by 0 thru 5, may be followed by R. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRDS](#) followed by 1, 2, 3, 4, 6, A, D, U or W, followed by 1, 2 or 3, may be followed by 0 thru 1000, may be followed by M or S, may be followed by A or X, followed by 0 thru 4. May be followed by suffix PC and any number between 1 and 10,000 inclusive. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRID](#) followed by W or D, followed by 1, 2 or 3, followed by 1 thru 9, followed by 1, 2 or 3, followed by 1 thru 9, followed by MB, MRE, MI, MS, IRE, BRE, SRE, RXE, RXD, IM, AMI or SL. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRIS](#) followed by W or D, followed by 1, 2 or 3, followed by 1 thru 9, followed by M, B, RE, RD, S, I, TS, US, UB, AM, PS or FT. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRIU](#) followed by A, D or W, followed by 1 thru 9, followed by C, CI, M, B, RE, RD, S, I, TS, PS, US, AM or UB. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRPD](#) followed by W or D, followed by 1, 2 or 3, followed by 1 thru 9, followed by 1, 2 or 3, followed by 1 thru 9, followed by MB, MRE, MI, MS, IRE, BRE, SRE, RXE, RXD, IM, AMI or SL. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRPS](#) followed by W or D, followed by 1, 2 or 3, followed by 1 thru 9, followed by M, B, RE, RD, S, I, TS, US, UB, AM, PS or FT. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRPU](#) followed by A, D or W, followed by 1 thru 9, followed by C, CI, M, B, RE, RD, S, I, TS, PS, US, AM or UB. May be followed by any number or letter.

**Solid state relays**, Model(s): [HRV](#) followed by 1, 2, 3, 4, 6, A, D, U or W, followed by 1, 2, 3 or 4, followed by A or S, followed by C, E or N. May be followed by any number or letter.

**Solid state relays**, Model(s): [X2637](#) may be followed by suffix PC and any number between 1 and 10,000 inclusive. May be followed by any number or letter.

**Solid state relays**, Model(s): [X2647](#) may be followed by suffix PC and any number between 1 and 10,000 inclusive. May be followed by any number or letter.

**Solid-state motor controllers**, Model(s): [MFC4A-4559](#)

NOTE - All recognized devices may be followed by PC and 1 thru 10,000.

[Last Updated](#) on 2026-02-17

UL Solutions permits the reproduction of the material contained in Product iQ subject to the following conditions: 1. The Guide Information, Assemblies, Constructions, Designs, Systems, and/or Certifications (files) must be presented in their entirety and in a non-misleading manner, without any manipulation of the data (or drawings). 2. The statement "Reprinted from Product iQ with permission from UL Solutions" must appear adjacent to the extracted material. In addition, the reprinted material must include a copyright notice in the following format: "©2026 UL LLC."