

Automotive Sensor Products

Water in Fuel Sensor



Figure 1: Water in Fuel Sensor

General Description

The purpose of the sensor is to detect the presence of water in diesel fuel. The sensor is mounted inside of the fuel filter and has two main output signal stages, low level and high level, which identify the presence and absence of water. The output signal level is changed when water reaches a defined water level in the fuel filter.

Operation

Basic Principle

The operation of the sensor is based on the resistive measurement method. Water is detected because it has a lower resistance than diesel fuel. Measurement of fluid resistance is performed between the two electrodes (for sensor options with two electrodes), or between an electrode and a ground (for option with single electrode).

Packaging Options

Custom packaging can be provided to meet any need, please contact Littelfuse Engineering for details.

Features

- ◆ Resistance measurement for fluid applications
- ◆ Robust, simple, cost effective design
- ◆ Works with different fluid parameters
- ◆ Wide voltage supply range: 5 V to 36 V
- ◆ DC or AC measurement method can be used
- ◆ Integrated self test
- ◆ Choice of connectors and terminals

Benefits

- ◆ Suitable for low pressure and high pressure systems
- ◆ Operating temperature range: -40°C to +135°C

Applications

- ◆ Diesel filters
- ◆ Fuel tank systems

Automotive Sensor Products

Operation

Current

DC or AC methods can be used.

DC method: Using this method, the continuous direct voltage is applied between the electrodes (or the electrode and the ground) and the direct current is flowing in the presence of the conductive fluid.

AC method: Using this method, the switched polarity voltage is applied between the electrodes and the alternating current is flowing in the presence of the conductive fluid. Alternating current helps to avoid deposits and corrosion on electrodes.

Hysteresis

Signal bouncing during the transition is avoided by using a hysteresis that can be adjusted during the design phase.

Additional Functions

The sensor may have additional optional functions: overcurrent protection, delay time for switching from water to fuel and from fuel to water, self-diagnostic function.

Self-test function identifies functionality of the sensor (in absence of water) during the start of vehicle.

The output signal is changed to level identifying presence of water for short time, which can be adjustable, and returns back to output level identifying absence of water.

Block Diagram

The simplified block diagram of the sensor circuit is shown below.

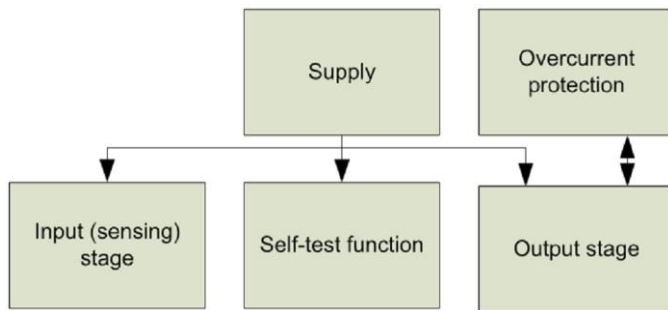


Figure 2: System Block Diagram

Possible Modifications

Output Signal Level Range

- ◆ Presence of water – high level
- ◆ Presence of water – low level

Output Load Type

- ◆ Lamp
- ◆ ECU with pull-up/pull-down resistor
- ◆ LED

Measurement Type

- ◆ DC
- ◆ AC

Automotive Sensor Products

Functional Characteristics

| Parameter | Comments | Min. | Typ. | Max. | Unit |
|--------------------------------------|---|------|-------|------|------|
| Power Requirements | | | | | |
| Supply Voltage | 12V system, operating voltage range | 6 | - | 16 | V |
| Supply Voltage | 24V system, operating voltage range | 18 | - | 36 | V |
| Supply Voltage | 5V, 12V, 24V system, operating voltage range | 5 | - | 36 | V |
| Switching Resistance | | | | | |
| Water Resistance | can be adjusted to customer needs | | ≤ 190 | | kΩ |
| Fuel Resistance | can be adjusted to customer needs | | ≥ 350 | | kΩ |
| Temperature Range | | | | | |
| Operating Temperature Range | | -40 | - | 125 | °C |
| Short Term Operation Temperature | | | | 135 | °C |
| Timing | | | | | |
| Self-test Duration | can be adjusted to customer needs | 1 | - | 3 | s |
| Delay Time, switching between stages | can be adjusted to customer needs | 0.5 | - | 2 | s |
| Operating Conditions | | | | | |
| Working Pressure | Suitable for low pressure and high pressure systems | | | | |

Littelfuse

Website: www.littelfuse.com
 Sales Support: ALL_Autosensors_Sales@littelfuse.com
 Technical Support: ALL_Autosensors_Tech@littelfuse.com

Information provided by Littelfuse is believed to be accurate and reliable.

All rights reserved. Trademarks and registered trademarks are the property of their respective owners.

Littelfuse products are designed for specific applications and should not be used for any purpose (including, without limitation, automotive applications) not expressly set forth in applicable Littelfuse product documentation. Warranties granted by Littelfuse shall be deemed void for products used for any purpose not expressly set forth in applicable Littelfuse product documentation. Littelfuse shall not be liable for any claims or damages arising out of products used in applications not expressly intended by Littelfuse as set forth in applicable Littelfuse product documentation.