

Installation Instructions

FHZ Series 5 and 7 Stud ZCASE® Fuse Holders

Part Numbers: 0FHZ0001Z, 0FHZ0002Z, 0FHZ0003Z 0FHZ0005Z,
0FHZ0006Z, 0FHZ0007Z, 0FHZ0008Z & 0FHZ0009Z

Specifications Overview

Amperage:	400A Continuous
Available Fuse Rating:	40- 600A
Accessories:	Studs, Bus Bar, Tether, Dust Cover
Box Dimensions:	281mm x 86mm x 59mm
Contact Temp:	-40° to 105° C
Connections:	M6, M8, and M10 Bolt Down Connection
Color:	Black
Material:	Base Cover: Black FR530 Dust Cover: Green Silicon Rubber Tether: Black Silicon Rubber Bottom Cap: Blue PA66
Max Main Input:	400A
M8 Mounting Torque:	12-15 Nm
Max Wire Size:	105 sqmm OR AWG 4/0

Installation

Assemble the fuse holder in the following sequence:

1. Open AssureLatches and remove cover. If you are using the 0FHZ0002Z, remove the nuts and the green rubber dust covers.
2. Place the ZCASE fuses on the studs to match stud size and loads. If you are using the optional dust covers replace them in the slots all the way down allowing the tabs to engage the fuse bodies.
 - Remember when selecting fuse values the continuous current through a fuse should be calculated as 75% of the rated value of the fuse (200A fuse should carry 150A max continuous current).
 - The total long term continuous current for all fuses should not exceed 400A.
 - Intermittent loads such as motor start, starter or compressor should not exceed 600A for 20 seconds.
3. Place ZCASE fuse holder into the mounting position and mark the location on the mounting surface for the mounting bolts. Drill four holes to accommodate the M8 Mounting hardware. Bolt the holder to the mounting surface with four M8 bolts torqued to XXNm maximum
4. Place an appropriate sized output cable with an a terminal matched to the stud size on the top of the ZCASE fuses and put on an appropriate nuts on the isolated studs. Torque the nuts to 14Nm±2Nm for M8 studs and 16Nm±2Nm for M10 studs. Be sure to hold the wire and terminal while applying torque to prevent twisting which can damage the fuse element.
5. Be sure that the output cables are routed so they have sufficient bend radius and are not at risk of being damaged or pinched. Lastly, make sure that all cables are strain relieved by being supported within 18" of the battery.
6. Replace the cover and snap the AssureLatch latches into place Note: the cover is designed to take a label, so good practice is to label the fuse box so each fuse and its loads are identified, as this makes troubleshooting later much easier

Step by step images shown in Figure 2 on page 2.



Description

The 5 Stud and 7 Stud ZCASE Fuse Holders are configurable products designed for primary high current power distribution. They use a power input terminal, which is usually paired with a ZCASE shunt for the input. With common bussed power, configurable studs (choose M6, M8, or M10) and appropriate ZCASE fuses, a wide variety of configurations are possible. The dust covers keep dust out of the backside of the fuse box and the cover protects the fuses from debris.

Ordering Information

PART NUMBERS	DESCRIPTION
0FHZ0001Z	5 Stud Assembly with Bolts and Bus Bar
0FHZ0002Z	5 Stud Full Assembly with M10 Input
0FHZ0003Z	5 Stud Box Only for Configuration
0FHZ0005Z	5 Stud Full Assembly with M8 Input
0FHZ0006Z	7 Stud Assembly with Bolts and Bus Bar
0FHZ0007Z	7 Stud Full Assembly With M8 Input Without Fuses
0FHZ0008Z	7 Stud Box Only for Configuration
0FHZ0009Z	7 Stud Full Assembly with M8 Input

Web Resources

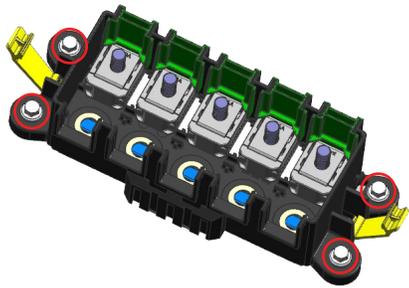
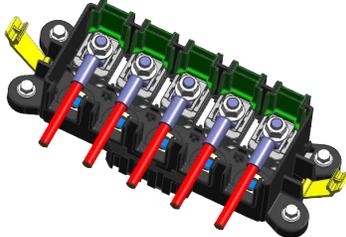
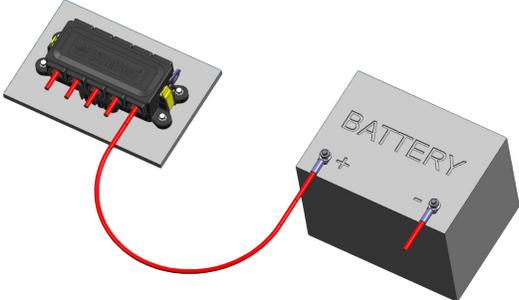
Download 2D print and technical resources at:
littelfuse.com/FHZseries

Installation Instructions

FHZ Series 5 and 7 Stud ZCASE® Fuse Holders

Part Numbers: 0FHZ0001Z, 0FHZ0002Z, 0FHZ0003Z 0FHZ0005Z,
0FHZ0006Z, 0FHZ0007Z, 0FHZ0008Z & 0FHZ0009Z

Figure 2 - Step by Step Installation

STEP 1	IMAGE	
	DETAILS	Open AssureLatches and remove cover. If you are using the 0FHZ0002Z, remove the nuts and the green rubber dust covers.
STEP 2	IMAGE	
	DETAILS	Place the ZCASE fuses on the studs to match stud size and loads. If you are using the optional dust covers replace them in the slots all the way down allowing the the tabs to engage the fuse bodies.
STEP 3	IMAGE	
	DETAILS	Place ZCASE fuse holder into the mounting position and mark the location on the mounting surface for the mounting bolts. Drill four holes to accommodate the M8 Mounting hardware. Bolt the holder to the mounting surface with four M8 bolts torqued to XXNm maximum.
STEP 4	IMAGE	
	DETAILS	Place an appropriate sized output cable with an a terminal matched to the stud size on the top of the ZCASE fuses and lput on an appropriate nuts on the isolated studs. Torque the nuts to 14Nm±2Nm for M8 studs and 16Nm±2Nm for M10 studs. Be sure to hold the wire and terminal while applying torque to prevent twisting which can damage the fuse element.
STEP 5	IMAGE	
	DETAILS	Be sure that the output cables are routed so they have sufficient bend radius and are not at risk of being damaged or pinched. Lastly, make sure that all cables are strain relieved by being supported within 18" of the battery.
STEP 6	IMAGE	
	DETAILS	Replace the cover and snap the AssureLatch latches into place. Apply a label to the cover to designate the fuses and their loads.

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, but are subject to changes without notice. Visit littelfuse.com for the most up-to-date technical information.