

Expertise Applied | Answers Delivered

INSTALLATION

-

- 5. Power and Reset:** Apply supply voltage. The AF0025 may indicate several alarms where the wiring differs from factory default. Press the RESET button for at least 10 seconds (but less than 20 seconds) to auto-detect the sensor configuration. Each connected sensor and power supply LED should be solid green.

6. Performance Test: Use a high-intensity light source on each connected sensor independently and ensure that the TRIP output changes state and operates the attached device as expected. See section 7 in the AF0025 manual.

Terminal Specifications: Wire Clamping, 28-12 AWG (0.08 to 2.5 mm²) copper conductors; Torque: 4.4 lbf-in (0.5 N·m)



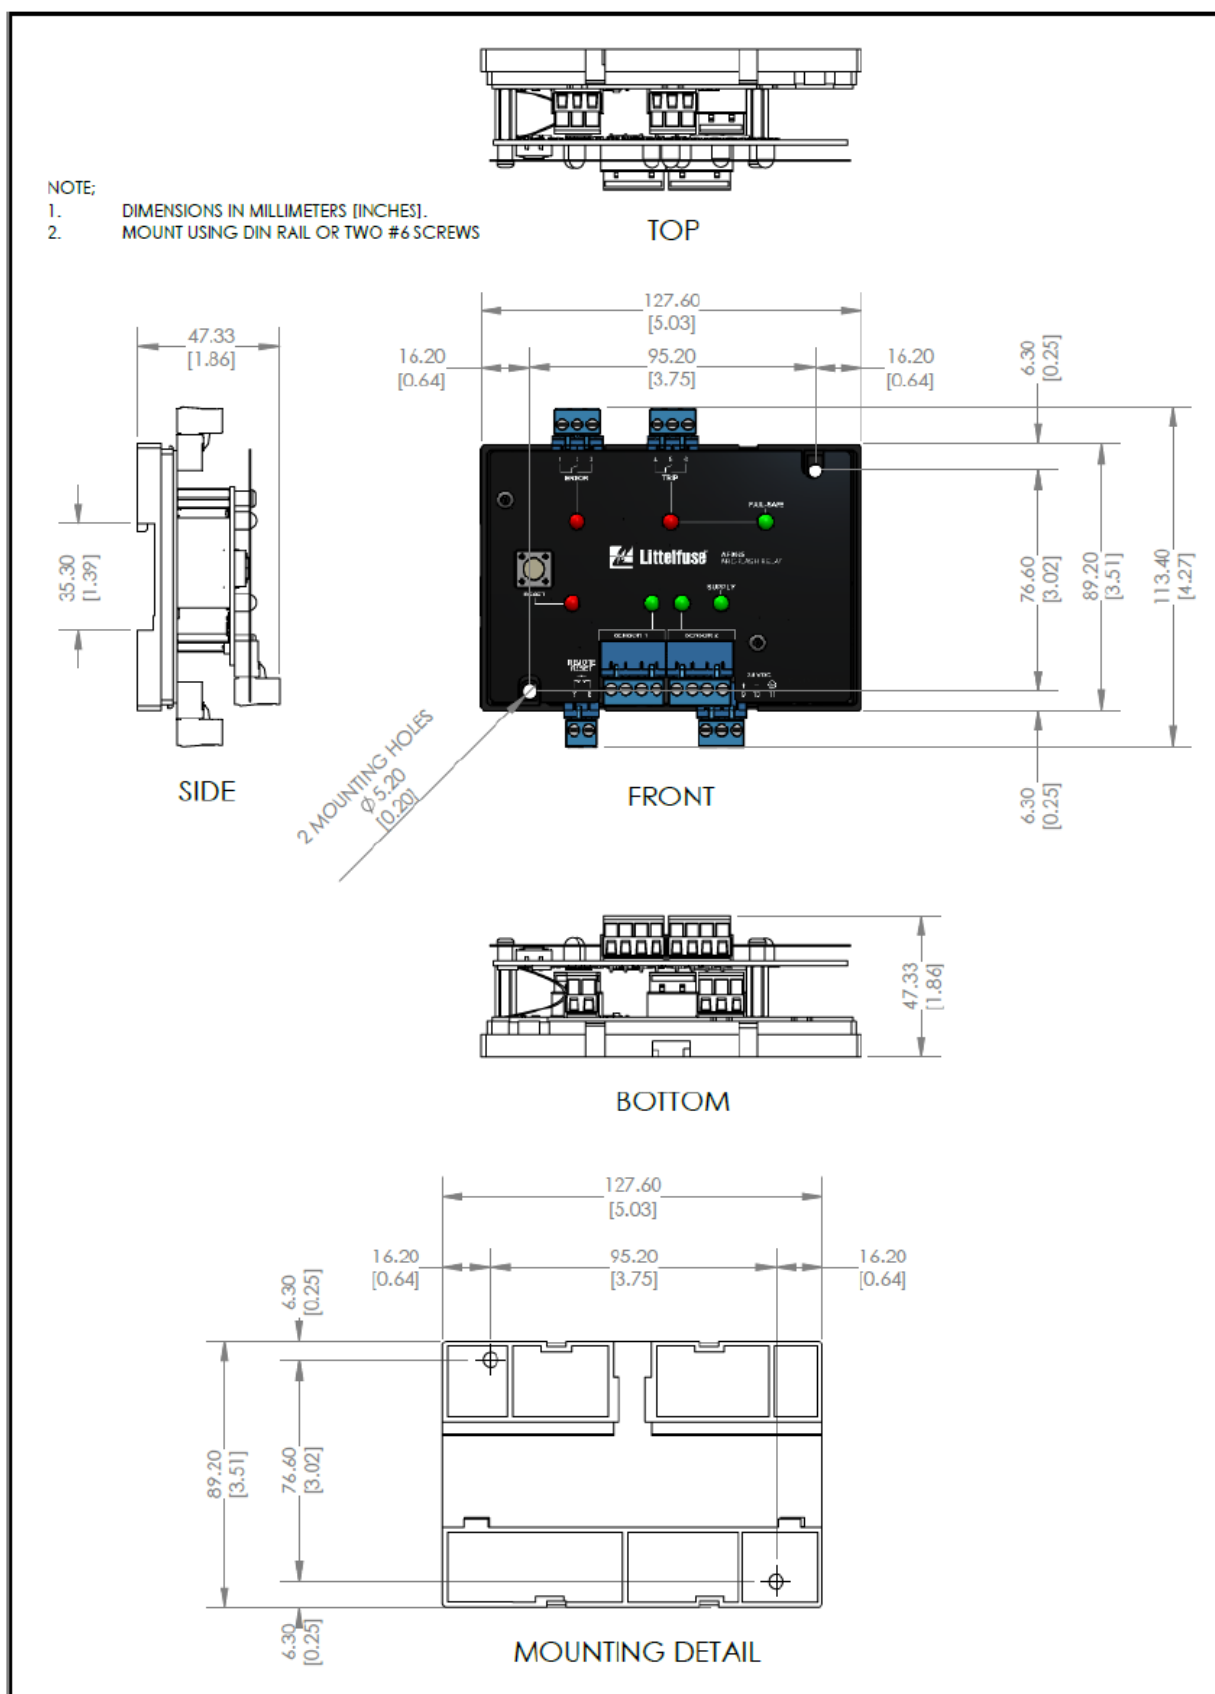


FIGURE 2. AF0025 Outline and Mounting Details.