

Installation Instructions

DCNHE350 Series

Part Number: DCNHE350NF12-B & DCNHE350NF24-B & DCNHE350NF12-F & DCNHE350NF24-F & DCNHE350MF12-B & DCNHE350MF24-B & DCNHE350MF12-F & DCNHE350MF24-F



Description

The DCNHE350 Series high voltage DC contactor relay, rated for 350A continuous current and up to 1000V DC, is designed for electric vehicle and industrial applications, including battery systems, charging equipment, motor control, circuit isolation, and circuit protection. Its non-polarized design supports flexible installation and simplified system layout.

This EV contactor features a compact, corrosion-resistant housing with sealed contacts to reduce contamination and arc exposure. Dual-coil operation provides very low continuous coil power, greatly reducing coil power and heating.

Featuring SPST normally open (NO) circuitry and non-polarized contacts, the DCNHE350 Series contactor is available with a 12V DC or 24V DC coil voltage rating, an optional SPST-NO auxiliary contact, and stud or internal-thread terminals, making it well suited as a DC contactor for electric vehicles and other high-current DC systems.

Web Resources

Download 2D print, installation guide and technical resources at: littelfuse.com/DCNHE350

Order Information:

See datasheet for part numbers and descriptions.

Installation

Assemble the relay in the following sequence:

Step 1. Prepare the Work Area - It is always advisable when working with electricity to take caution and turn off any power unit you may encounter while installing any electrical device.

Step 2. Mount the Contactor - Mount the contactor using the mounting hardware that is supplied with the contactor or the recommended fasteners.

Step 3. Prepare the Wiring and Connect the Control Wires - Strip all the wires that will be connected to the control coil and the contactor terminations with a wire stripper. Remove approximately ½ inch of the wire's insulation to expose the bare copper wire. Connect the control wires to the coil solenoid first, red and black wires on contactor. When installing the wires, be sure that a good electrical connection is made by using an appropriate electrical

Step 4. Connecting the Switched Power Wires - Verify the switched contacts are open, no continuity between terminals "+A1" and "-A2". Using the hardware that is supplied with the contactor or the recommended fasteners, connect the Line power feed wire to the contactor terminal marked "+A1". Connect the Load power output wire to the contactor terminal marked "-A2". As with the control wires, be sure that a good electrical connection is made. Do not allow any loose strands to short against any equipment and cause electrical damage.

Step 5. Connecting the Switched Auxiliary Contact Wires - If an Auxiliary Contact is provided, connect the low power Line feed wire to one of the white wires and the low power Load output wire to the remaining white wire. When installing the wires, be sure that a good electrical connection is made. Do not allow any loose strands to short against any equipment and cause electrical damage.

Step by step images shown in Figure 2 on page 2.

Installation Instructions

DCNHE350 Series


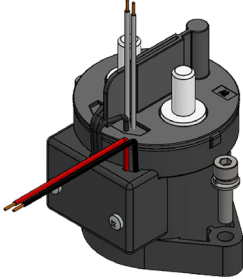
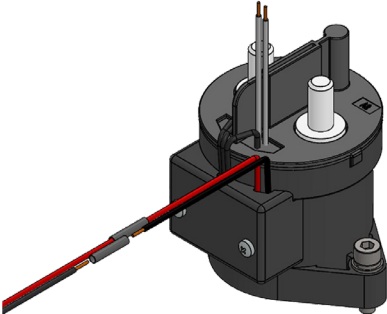
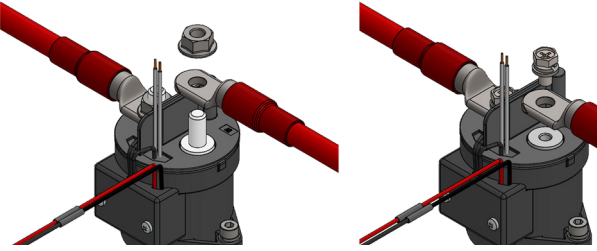
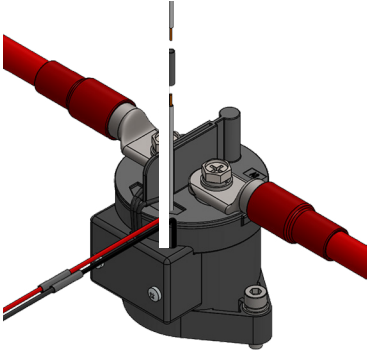
Part Number: DCNHE350NF12-B & DCNHE350NF24-B & DCNHE350NF12-F &

DCNHE350NF24-F & DCNHE350MF12-B & DCNHE350MF24-B & DCNHE350MF12-F &

DCNHE350MF24-F



Expertise Applied | Answers Delivered

<p>STEP 1</p>	 <p>DANGER</p> <p>Electrical Hazard Turn Off Power Before Servicing</p>	<p>Prepare the Work Area - It is always advisable when working with electricity to take caution and turn off any power unit you may encounter while installing any electrical device.</p>
<p>STEP 2</p>		<p>Mount the Contactor - Mount the contactor using the mountin hardware that is supplied with the contactor or the recommended fasteners.</p>
<p>STEP 3</p>		<p>Prepare the Wiring and Connect the Control Wires - Strip all the wires that will be connected to the control coil and the contactor terminations with a wire stripper. Remove approximately 1/2 inch of the wire's insulation to expose the bare copper wire. Connect the control wires to the coil solenoid first, red and black wires on contactor. When installing the wires, be sure that a good electrical connection is made by using an appropriate electrical connector. Do not allow any loose strands to short against any equipment and cause electrical damage.</p>
<p>STEP 4</p>		<p>Connecting the Switched Power Wires - Verify the switched contacts are open, no continuity between terminals "+A1" and "-A2". Using the hardware that is supplied with the contactor or the recommended fasteners, connect the Line power feed wire to the contactor terminal marked "+A1". Connect the Load power output wire to the contactor terminal marked "-A2". As with the control wires, be sure that a good electrical connection is made. Do not allow any loose strands to short against any equipment and cause electrical damage.</p>
<p>STEP 5</p>		<p>Connecting the Switched Auxiliary Contact Wires - If an Auxiliary Contact is provided, connect the low power Line feed wire to one of the white wires and the low power Load output wire to the remaining white wire. When installing the wires, be sure that a good electrical connection is made. Do not allow any loose strands to short against any equipment and cause electrical damage.</p>

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, and are subject to changes without notice. Visit littelfuse.com for the most up-to-date technical information.