

## EL731 DEVICENET INTERFACE

Revision 0-B-121614



Copyright © 2014 Littelfuse Startco

All rights reserved.

This page intentionally left blank.

## TABLE OF CONTENTS

SECTION	PAGE
<b>1 General</b> .....	1
<b>2 Installation</b> .....	1
<b>3 DeviceNet</b> .....	1
3.1 Configuration Software.....	1
3.2 Configuration Settings.....	1
3.3 Termination.....	1
3.4 Power Consumption.....	1
3.5 EDS File.....	1
3.6 LED Indication.....	1
<b>4 Classes</b> .....	2
<b>Appendix A EL731 DeviceNet Interface</b>	
<b>Revision History</b> .....	6

## LIST OF FIGURES

FIGURE	PAGE
1 LED Indicators.....	1

## LIST OF TABLES

TABLE	PAGE
1 EL731 DeviceNet Connections.....	1
2 NS – Network Status LED.....	1
3 MS – Module Status LED.....	1

## DISCLAIMER

Specifications are subject to change without notice. Littelfuse Startco is not liable for contingent or consequential damages, or for expenses sustained as a result of incorrect application, incorrect adjustment, or a malfunction.

This page intentionally left blank.

## 1. GENERAL

This document describes the AC700-CUA-01 Communications Upgrade Adapter DeviceNet features supported by the EL731.

## 2. INSTALLATION

To field-install an AC700-CUA Communications Upgrade Adapter, disconnect the EL731 supply voltage, remove the adapter-access cover, insert the adapter, and retain with the supplied screws. Apply the supply voltage.

## 3. DEVICENET

### 3.1 CONFIGURATION SOFTWARE

TABLE 1. EL731 DEVICENET CONNECTIONS

TERMINAL	DESCRIPTION
1	V -
2	CAN_L
3	SHIELD/DRAIN
4	CAN_H
5	V +

### 3.2 CONFIGURATION SETTINGS

The EL731 supports 125, 250, and 500 Kbit/s. The MAC ID is adjustable from 0 to 63. The baud rate and MAC ID are set using DeviceNet commands or the RSNetworx Node Commissioning tool.

### 3.3 TERMINATION

DeviceNet requires a 120 Ω resistor at each end of the network.

### 3.4 POWER CONSUMPTION

The DeviceNet module requires 125 mA maximum from an external 24 Vdc supply to power the driver circuits.

### 3.5 EDS FILE

The EDS file is an Electronic Datasheet file that defines the characteristics of the EL731. It is used by configuration software such as RSNetWorx to setup the EL731 on the network and allows DeviceNet scanners to map EL731 I/O Data to PLC/PAC memory.

Only one I/O Polling assembly is supported, consisting of four bytes for output and four bytes for input. See Section 4.

## 3.6 LED INDICATION

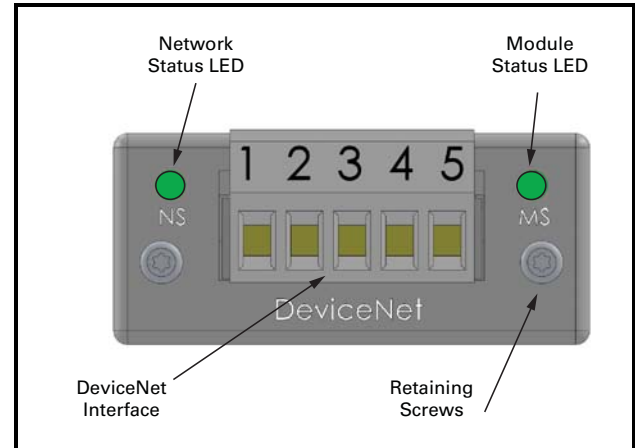


FIGURE 1. LED Indicators.

TABLE 2. NS - NETWORK STATUS LED

STATE	DESCRIPTION
Steady Off	Not Online / No Power
Steady Green	Online, One Or More Connections Are Established
Flashing Green	Online, No Connections Established
Steady Red	Critical Link Failure
Flashing Red	One Or More Connections Timed-Out
Alternating Red/Green	Self Test

**NOTE:** A test sequence is performed on this LED during startup.

TABLE 3. MS - MODULE STATUS LED

STATE	DESCRIPTION
Steady Off	No Power
Steady Green	Operating In Normal Condition
Flashing Green	Missing Or Incomplete Configuration, Device Needs Commissioning
Steady Red	Unrecoverable Fault(s)
Flashing Red	Recoverable Fault(s)
Alternating Red/Green	Self Test

**NOTE:** A test sequence is performed on this LED during startup.

#### 4. CLASSES

##### Assembly Class (4), Instance (0) Attributes

ATTRIBUTE NUMBER	ATTRIBUTE NAME	SERVICES	DESCRIPTION	DEFAULT, MINIMUM, MAXIMUM	DATA TYPE
1 0x01	Revision	Get_Attribute_Single	Revision of this object.	1, 1, 1	UINT

##### Assembly Class (4), Instance (100), Attribute (3)

BYTE	DESCRIPTION	TYPE
0	Trip State	T12
1		
2	Alarm State	T13
3		

##### Assembly Class (4), Instance (150), Attribute (3)

BYTE	DESCRIPTION	TYPE
0	CT1 Enable	T3
1	Command Register	T14
2	CT2 Enable	T3
3	Command Register	T14

##### Application Data Class (162), Instance (0) Attributes

ATTRIBUTE NUMBER	ATTRIBUTE NAME	SERVICES	VALUE	DATA TYPE
1	Revision	Get	1	UINT
2	Max Instance	Get	76	UINT
3	Number Of Instances	Get	76	UINT

##### Application Data Class (162)

INSTANCE NUMBER	ATTRIBUTE 1 NAME	ATTRIBUTE 2 DATA TYPE	ATTRIBUTE 3 NUMBER OF ELEMENTS	ATTRIBUTE 4 SERVICES	ATTRIBUTE 5 VALUE
1	Model Code	UINT16	1	Get	T1
2	Firmware Revision	UINT16	1	Get	T1
3	Serial Number	UINT32	1	Get	T2
4	Model Option	UINT32	1	Get	T2
5	Reserved			Get	
6	CT1 Enable	UINT16	1	Get/Set	T3
7	CT1 Primary Turns	UINT16	1	Get/Set	T1
8	CT1 Trip Time	UINT32	1	Get/Set	T2
9	CT1 Trip Level	UINT32	1	Get/Set	T2
10	Reserved			Get	
11	CT1 Alarm Level	UINT32	1	Get/Set	T2
12	CT1 Calibrate	UINT16	1	Set	T4
13	Reserved			Get	
14	Reserved			Get	
15	CT2 Enable	UINT16	1	Get/Set	T3
16	CT2 Primary Turns	UINT16	1	Get/Set	T1
17	CT2 Trip Time	UINT32	1	Get/Set	T2
18	CT2 Trip Level	UINT32	1	Get/Set	T2
19	Reserved			Get	
20	CT2 Alarm Level	UINT32	1	Get/Set	T2
21	CT2 Input Filter	UINT16	1	Get/Set	T5
22	Reserved			Get	
23	Reserved			Get	

**Application Data Class (162) (continued)**

INSTANCE NUMBER	ATTRIBUTE 1 NAME	ATTRIBUTE 2 DATA TYPE	ATTRIBUTE 3 NUMBER OF ELEMENTS	ATTRIBUTE 4 SERVICES	ATTRIBUTE 5 VALUE
24	Reserved			Get	
25	Reserved			Get	
26	PTC Trip Action	UINT16	1	Get/Set	T3
27	PTC Alarm Action	UINT16	1	Get/Set	T3
28	Reserved			Get	
29	Reserved			Get	
30	RTD Trip Action	UINT16	1	Get/Set	T3
31	RTD Trip Level	UINT32	1	Get/Set	T2
32	RTD Alarm Action	UINT16	1	Get/Set	T3
33	RTD Alarm Level	UINT32	1	Get/Set	T2
34	Reserved			Get	
35	Reserved			Get	
36	Relay 1 Function	UINT16	1	Get/Set	T6
37	Relay 1 Mode	UINT16	1	Get/Set	T7
38	Relay 2 Function	UINT16	1	Get/Set	T6
39	Relay 2 Mode	UINT16	1	Get/Set	T7
40	Relay 3 Function	UINT16	1	Get/Set	T6
41	Relay 3 Mode	UINT16	1	Get/Set	T7
42	Reserved			Get	
43	Reserved			Get	
44	Analog Out CT Select	UINT16	1	Get/Set	T8
45	Analog % Select	UINT16	1	Get/Set	T3
46	Output Filter	UINT16	1	Get/Set	T3
47	Reserved			Get	
48	Reserved			Get	
49	Temp. Sensor	UINT16	1	Get/Set	T10
50	Reserved			Get	
51	Reserved			Get	
52	Display Filter	UINT16	1	Get/Set	T3
53	Reserved			Get	
54	Reserved			Get	
55	CT1 Current	SINT32	1	Get	T11
56	CT2 Current	SINT32	1	Get	T11
57	Full Current	SINT32	1	Get	T11
58	Internal Temp.	SINT32	1	Get	T11
59	PTC Temp.	SINT32	1	Get	T11
60	RTD Temperature	SINT32	1	Get	T11
61	Reserved			Get	
62	Reserved			Get	
63	Clear Counters	UINT16	1	Set	T4
64	Load Defaults	UINT16	1	Set	T4
65	Restart System	UINT16	1	Set	T4
66	Reserved			Get	
67	Reserved			Get	
68	Trip State	UINT16	1	Get	T12
69	Alarm State	UINT16	1	Get	T13
70	Trip Counter	UINT16	1	Get	T1
71	Alarm Counter	UINT16	1	Get	T1
72	System Uptime	UINT32	1	Get	T2
73	Reserved			Get	
74	Reserved			Get	
75	Running Time (s)	UINT32	1	Get	T2
76	External Reset	UINT16	1	Set	T4

**Attribute Data Types**

ATTRIBUTE	TYPE
1	Short String
2	USINT 0 = Boolean 1 = Signed 8 Bit Integer 2 = Signed 16 Bit Integer 3 = Signed 32 Bit Integer 4 = Unsigned 8 Bit Integer 5 = Unsigned 16 Bit Integer 6 = Unsigned 32 Bit Integer
3	USINT
4	USINT
5	Type Is Defined by Attribute 2

**Attribute 5 Data Format**

TYPE	DESCRIPTION
T1	16-Bit Integer
T2	32-Bit Unsigned Integer
T3	0 = Disable 1 = Enable
T4	Command 1 = Send Command
T5	CT2 Input Filter 0 = None 1 = Full Range 2 = 90 Hz Low Pass 3 = 190 Hz High Pass 4 = 3 kHz Low Pass
T6	Relay Functions 0 = Trip 1 = Alarm 2 = Watchdog 3 = Current
T7	Relay Mode 0 = Non-Fail-Safe 1 = Fail-Safe
T8	Analog Out CT Select 0 = CT1 1 = CT2 2 = Both CT's
T9	Analog % Level 0 = 0 – 5A Normal Mode 1 = 0 – Trip Level (% Trip Level Mode)
T10	Temp. Sensor 0 = Disabled 1 = RTD Sensor 2 = PTC Sensor
T11	32-Bit Signed Integer, (High) Bits 31..16, (Low) Bits 15..0



**Attribute 5 Data Format (continued)**

TYPE	DESCRIPTION
T12	Trip Status Bit0: 1 = System Running Bit1: 1 = Trip Current CT1 Bit2: 1 = Trip Current CT2 Bit3: 1 = Trip User Test Bit4: 1 = Trip CT1 Detect Bit5: 1 = Trip CT2 Detect Bit6: 1 = Trip NVRAM Error Bit7: 1 = Calibrate Bit8: 1 = Calibrate Init Bit9: 1 = Trip Calibrate Bit10: 1 = Trip PTC Sensor Bit11: 1 = Trip RTD Sensor Bit12: 1 = System Disabled
T13	Alarm Status Bit0: 1 = No Alarms Bit1: 1 = CT1 Current Bit2: 1 = CT2 Current Bit3: 1 = PTC Sensor Bit4: 1 = RTD Sensor Bit5: 1 = System Disabled
T14	Command Register: Sends Command when Charged from 0 to 3.

**APPENDIX A**  
**EL731 DEVICENET INTERFACE REVISION HISTORY**

<b>MANUAL RELEASE DATE</b>	<b>MANUAL REVISION</b>
December 16, 2014	0-B-121614
July 9, 2014	0-A-070914

**MANUAL REVISION HISTORY****REVISION 0-B-121614****SECTION 4**

Attribute 5 data format, T13 (Bit0) updated.

**REVISION 0-A-070914**

Initial release.