


**SE-105 MANUAL**  
**GROUND-FAULT GROUND-CHECK MONITOR**  
**REVISION 13-D-050315**

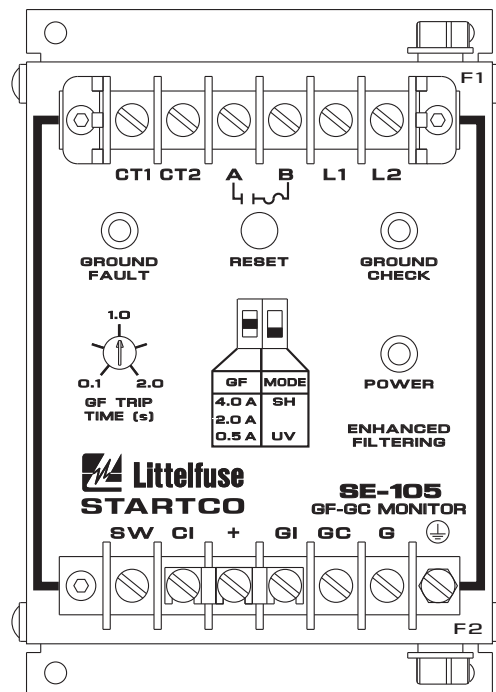

Copyright © 2015 by Littelfuse Startco

All rights reserved.

This page intentionally left blank.

## TABLE OF CONTENTS

| SECTION                                         | PAGE |
|-------------------------------------------------|------|
| <b>1 General</b> .....                          | 1    |
| <b>2 Operation</b> .....                        | 1    |
| 2.1 Settings.....                               | 1    |
| 2.1.1 GF Trip Time.....                         | 1    |
| 2.1.2 GF.....                                   | 1    |
| 2.1.3 Mode.....                                 | 1    |
| 2.2 Indication and Reset.....                   | 1    |
| 2.3 Fusing.....                                 | 1    |
| <b>3 Installation</b> .....                     | 2    |
| 3.1 SE-105.....                                 | 2    |
| 3.2 Ground-Fault CT.....                        | 4    |
| 3.3 Ground-Check Termination.....               | 5    |
| 3.4 Remote Operation.....                       | 6    |
| 3.5 Parallel-Path Isolation.....                | 6    |
| 3.6 Ground-Fault Testing.....                   | 6    |
| <b>4 Compatibility</b> .....                    | 6    |
| <b>5 Technical Specifications</b> .....         | 12   |
| 5.1 SE-105.....                                 | 12   |
| 5.2 Current Sensors.....                        | 13   |
| 5.3 Termination Assemblies.....                 | 13   |
| <b>6 Ordering Information</b> .....             | 13   |
| <b>7 Warranty</b> .....                         | 14   |
| <b>8 Ground-Fault Performance Test</b> .....    | 15   |
| <b>Appendix A SE-105 Revision History</b> ..... | 16   |

## LIST OF TABLES

| TABLE                           | PAGE |
|---------------------------------|------|
| 1 Terminal Designations.....    | 6    |
| 2 Ground-Fault-Test Record..... | 15   |

## DISCLAIMER

Specifications are subject to change without notice. Littelfuse Startco is not liable for contingent or consequential damages, or for expenses sustained as a result of incorrect application, incorrect adjustment, or a malfunction.

## LIST OF FIGURES

| FIGURE                                                                | PAGE |
|-----------------------------------------------------------------------|------|
| 1 Typical Application.....                                            | 3    |
| 2 SE-105 Outline and Mounting Details.....                            | 4    |
| 3 CT200 and CT200L Current Transformers.....                          | 5    |
| 4 Zener-Diode Termination Devices.....                                | 6    |
| 5 SE-TA6 Termination Assembly.....                                    | 7    |
| 6 SE-TA6ASF-WL Small-Format Termination Assembly with Wire Leads..... | 7    |
| 7 RK-102 Remote Indication and Reset Kit.....                         | 8    |
| 8 RK-105 Remote Indication-and-Reset Assembly.....                    | 8    |
| 9 RK-105I Remote Indication Assembly.....                             | 9    |
| 10 RK-13 Relay Interface Module.....                                  | 9    |
| 11 PPI-600V Parallel-Path Isolator.....                               | 10   |
| 12 PPI-600V Typical Installation.....                                 | 11   |
| 13 Ground-Fault-Test Circuits.....                                    | 15   |

This page intentionally left blank.

## 1. GENERAL

The SE-105 is a combination ground-fault and ground-check monitor for resistance-grounded systems in non-hazardous applications. The ground-fault circuit is latching and the ground-check circuit is typically non-latching. One output contact is provided for contactor control, or for shunt or undervoltage operation in a breaker trip circuit.

Ground-fault current is sensed by a CT200-series current transformer. A trip level of 0.5, 2.0, or 4.0 A is switch selectable for use with a 5-, 15-, or 25-A grounding resistor. Enhanced filtering eliminates false ground-fault trips from adjustable-speed-drive harmonic distortion. Trip time is adjustable from 0.1 to 2.0 seconds.

The fail-safe ground-check circuit is validated by an end-of-line termination with a 5.6-volt Zener characteristic. The Zener-characteristic clamps induced voltage and allows induced current to flow in the ground-check loop. Consequently, induced-ac-withstand capability, noise immunity, and open/short detection are independent of current in the phase conductors. Enhanced filtering prevents false ground-check validation due to an active chopper condition. See [www.littelfuse.com/relayscontrols](http://www.littelfuse.com/relayscontrols) for Technical Note GC-1.

**NOTE:** The SE-105 is not a lock-out device. Follow lock-out procedures for maintenance.

## 2. OPERATION

### 2.1 SETTINGS

#### 2.1.1 GF TRIP TIME

Ground-fault trip time is adjustable from 0.1 to 2.0 seconds. Time-coordinated ground-fault protection requires this setting to be longer than the trip time of downstream ground-fault devices.

#### 2.1.2 GF

The ground-fault-circuit trip level is 0.5, 2.0, or 4.0 A when current is sensed with a CT200-series current transformer. Since the ground-fault-circuit trip level should not be greater than 20% of the grounding resistor let-through current, these levels are appropriate for use with 5-, 15-, or 25-A grounding resistors. For other applications, the trip level of the ground-fault circuit is 0.25, 1.0, or 2.0% of the primary rating of the 5-A-secondary current transformer.

#### 2.1.3 MODE

In the shunt-trip mode (SH), the output relay energizes and its contact closes if the ground-check loop becomes

invalid or if a ground-fault trip occurs. The shunt-trip mode is not fail-safe and is not recommended because:

- Shunt-trip devices do not operate if supply voltage fails.
- Shunt-trip ground-check circuits allow open cable couplers to be energized for a short interval after supply voltage is applied.

In the undervoltage mode (UV), the output relay is energized and its contact is closed when the ground-check loop is valid and the ground-fault circuit is not tripped. The undervoltage mode is referred to as fail-safe and is recommended because:

- Undervoltage devices release if supply voltage fails.
- Undervoltage ground-check circuits do not allow cable couplers to be energized until the ground-check loop is verified.

For fail-safe-only applications, use an SE-107 Ground-Fault Ground-Check Monitor.

### 2.2 INDICATION AND RESET

The blue POWER LED indicates that the internal power supply is on. The red GROUND FAULT LED indicates a ground-fault trip and the green GROUND CHECK LED indicates a valid ground-check loop. When a ground-fault trip occurs, the SE-105 remains latched until the reset button is pressed or the supply voltage is cycled. The ground-check circuit is non-latching and does not require a reset. Terminals are provided for remote indication and reset as shown in Fig. 1.

For latching ground-check (Option L), the GROUND CHECK LED is red and it indicates a latched ground-check trip.

### 2.3 FUSING

The output contact is protected by fuse F1 (4.0 A, time delay). The ground-check circuit is protected by fuse F2 (0.5 A, time delay).

### 3. INSTALLATION

#### 3.1 SE-105



SE-105 outline and mounting details are shown in Fig. 2. Typical connections are shown in Fig. 1. Connect supply voltage to L1 and L2. For a 120-Vac supply, connect supply neutral to L2. For direct-current supply (Option D), connect supply negative to L2. Connect chassis-bonding terminal  $\oplus$  to ground.

Connect contact terminals A and B as required.

Faceplate LED's are driven in series with remote-indication LED's. When a remote kit is not used, terminals CI, +, and GI must be connected for the faceplate LED's to operate. These jumpers are installed at the factory.

Connect terminal GC to the outgoing ground-check conductor and connect terminal G to ground. To meet electrical code requirements, do not jumper chassis-bonding terminal  $\oplus$  to terminal G.

Install the upper terminal-block cover to prevent inadvertent contact with line terminals.

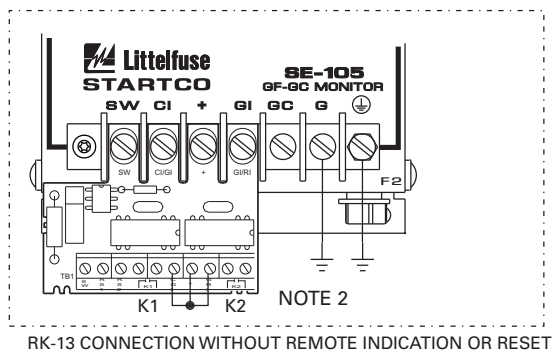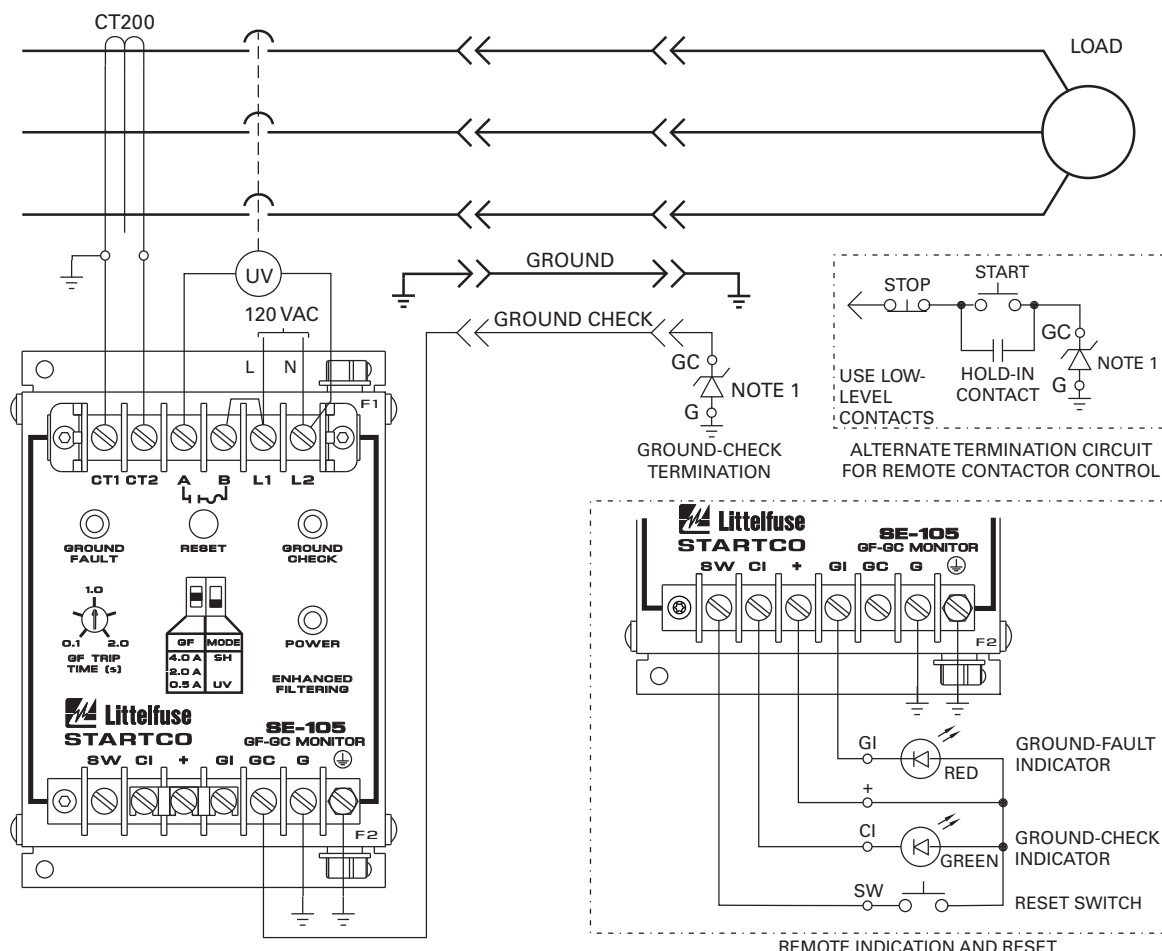

NOTES:

1. SEE ORDERING INFORMATION FOR TERMINATION DEVICES. 5-W AXIAL LEAD DEVICE INCLUDED.
2. K1 CLOSING ON GROUND-CHECK VALID. FOR OPTION L, K1 CLOSING ON GROUND-CHECK TRIP. K2 CLOSING ON GROUND-FAULT TRIP.

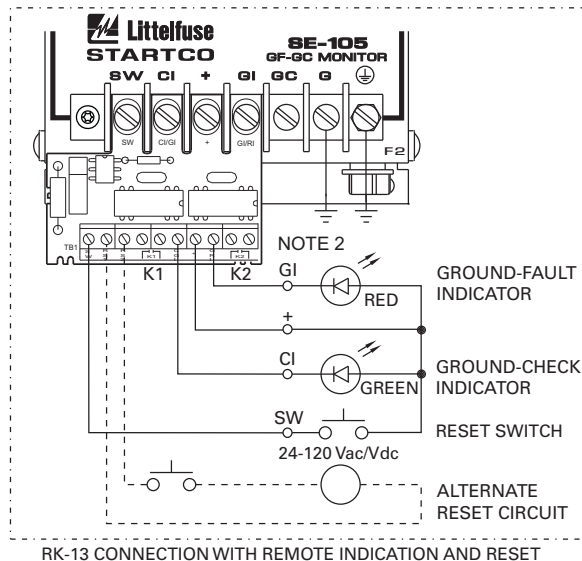


FIGURE 1. Typical Application.

### 3.2 GROUND-FAULT CT

Outline and mounting details for CT200 and CT200L current transformers are shown in Fig. 3. Pass the phase conductors through the CT window as shown in Fig. 1.

Do not pass the ground or ground-check conductors through the CT. In applications that require shields or drain wires to pass through the CT, return them through the CT before connecting them to ground.

Connect the secondary of the ground-fault CT to SE-105 terminals CT1 and CT2. The CT connection to the SE-105 is not polarity sensitive. Ground one side of the CT secondary.

**NOTE:** The CT200 and CT200L are 600-V-rated current transformers. When system voltage is above 600 V, ensure conductors passed through the sensor window are insulated to system voltage.


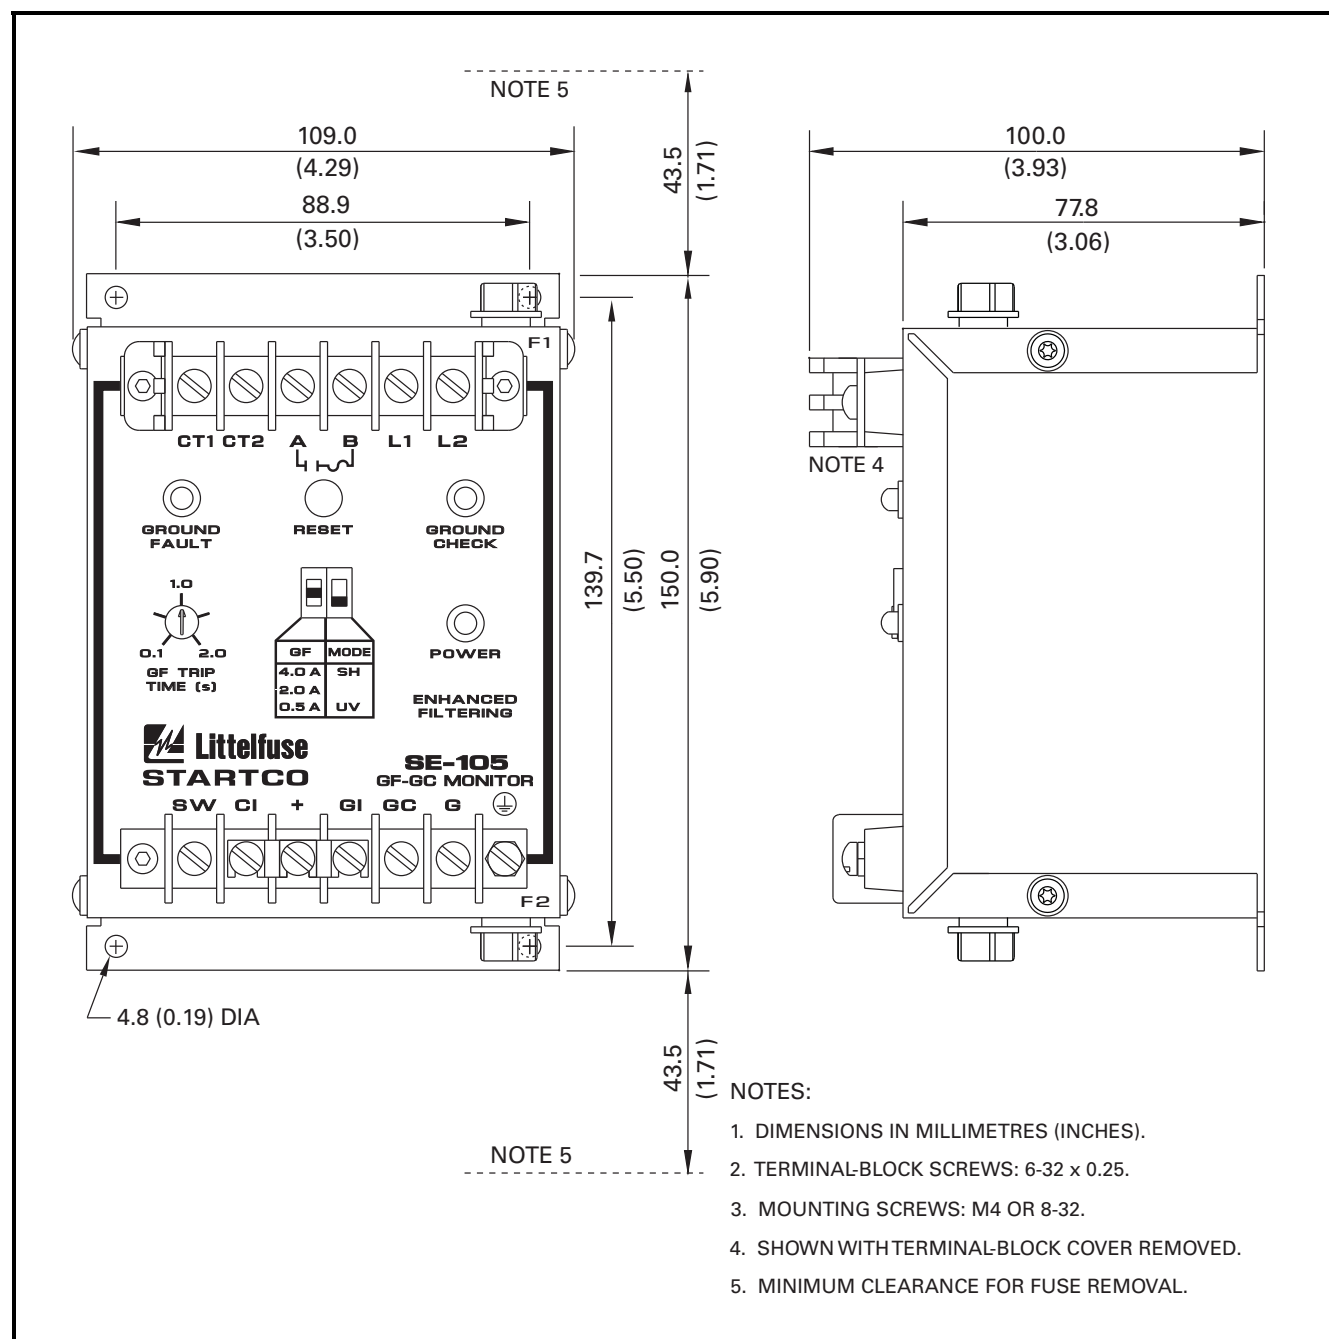


FIGURE 2. SE-105 Outline and Mounting Details.

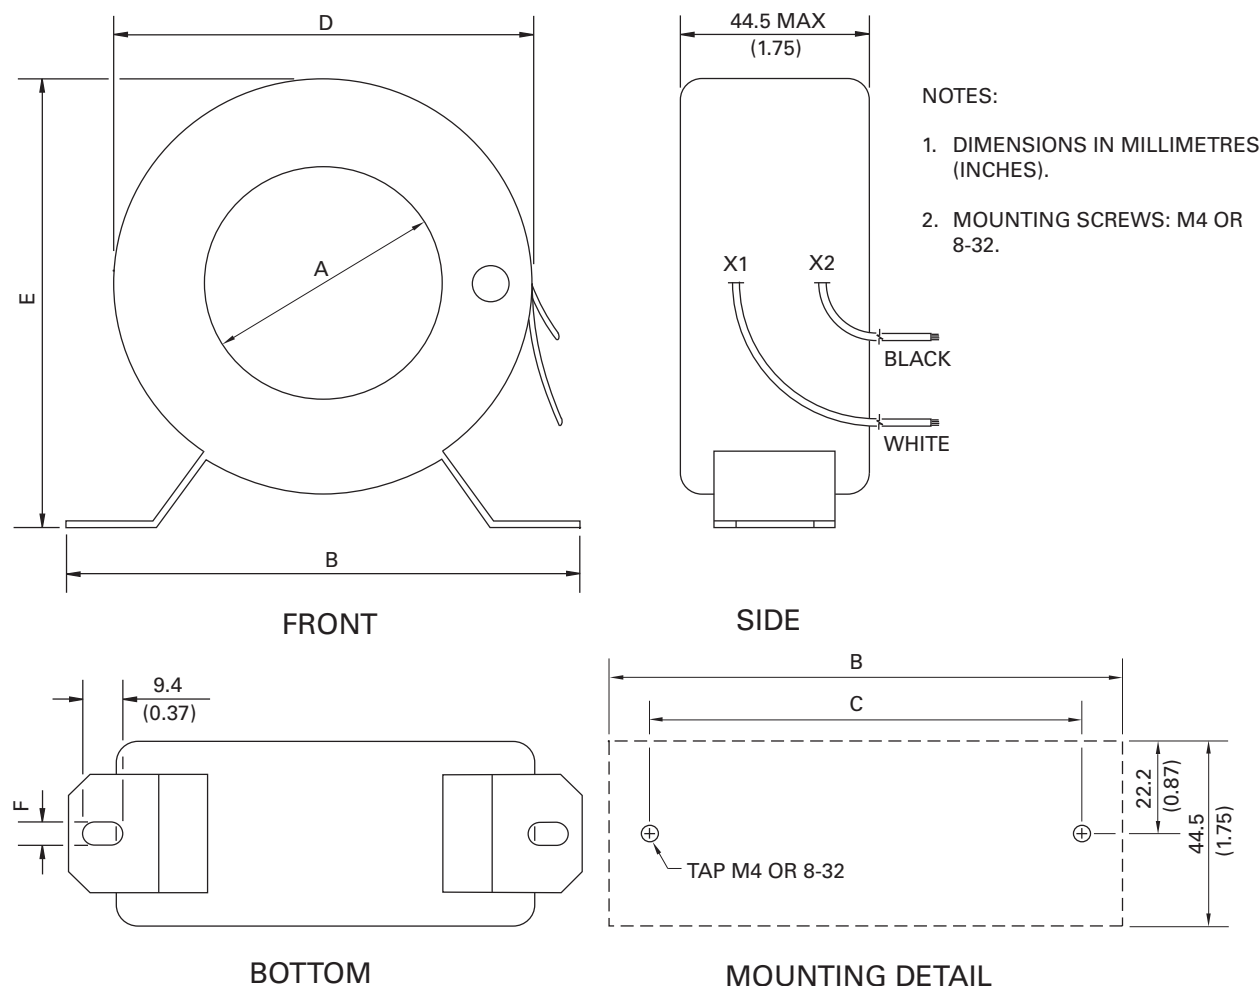

| PART NUMBER | DIMENSIONS  |              |              |              |              |            |
|-------------|-------------|--------------|--------------|--------------|--------------|------------|
|             | A           | B            | C            | D            | E            | F          |
| CT200       | 55.9 (2.20) | 120.7 (4.75) | 101.6 (4.00) | 98.3 (3.87)  | 108.0 (4.25) | 5.6 (0.22) |
| CT200L      | 88.9 (3.50) | 154.0 (6.06) | 133.4 (5.25) | 139.7 (5.50) | 144.5 (5.69) | 7.1 (0.28) |

FIGURE 3. CT200 and CT200L Current Transformers.

### 3.3 GROUND-CHECK TERMINATION

Install the ground-check termination at the load to complete the ground-check loop as shown in Fig. 1. Termination outlines and mounting details are shown in Figs. 4, 5, and 6. Use only a Littelfuse Startco termination device; others may not meet performance requirements. Connect terminal G of the termination to the equipment frame so that the ground-conductor-to-equipment-frame connection is included in the monitored

ground-check loop. Connect terminal GC of the termination to the incoming ground-check conductor.

If ground-check interlocks are used, low-level (bifurcated, precious-metal, or sealed-reed) contacts are recommended.

If used as a ground-fault monitor only, install the termination at the SE-105.

### 3.4 REMOTE OPERATION

Terminals SW, CI, +, and GI are provided for remote LED indication and remote reset as shown in Fig. 1. Remote LED's are driven in series with the front-panel LED's.

Remove factory-installed jumpers from terminals CI, +, and GI, and connect a remote kit as shown in Fig. 1. Optional remote kits are shown in Figs. 7, 8, and 9. Standard LED indicator lamps are not compatible with the SE-105.

For general-purpose applications, use the RK-105 Remote Indication-and-Reset Assembly or the RK-105I Remote Indication Assembly. Connect terminals SW, CI, +, and GI to remote-kit terminals SW, CI/RI, +, and GI.

For 22-mm-component applications, use the RK-102 Remote Indication and Reset Kit. Connect terminal X2 of the green ground-check indicator to CI, terminal X2 of the red ground-fault indicator to GI, and connect indicator X1 terminals to +. For remote reset, connect the normally open push-button switch across terminals + and SW.

If indication is required from a separate voltage source, or if separate ground-fault and ground-check contacts are required, use an RK-13 Relay Interface Module. The RK-13 mounts on the SE-105 lower terminal block and is compatible with the RK-102, RK-105 and RK-105I. See Figs. 1 and 10. Contact K1 closes when the GC LED is on and contact K2 closes when the GF LED is on.

### 3.5 PARALLEL-PATH ISOLATION

A PPI-600V can be used for parallel-path rejection. A PPI-600V will also eliminate intermachine arcing and prevent stray ac and dc currents from flowing in the monitored ground wire. See Figs. 11 and 12. See Technical Note GC-10 "Parallel Path Isolator" at [www.littelfuse.com/relayscontrols](http://www.littelfuse.com/relayscontrols), or contact Littelfuse Startco for application details.

### 3.6 GROUND-FAULT TESTING

Use CT-primary current injection to test the ground-fault circuit. Fig. 13 shows test circuits using the SE-400 Ground-Fault-Relay Test Unit and the SE-100T Ground-Fault-Relay Tester. The SE-400 has a programmable output of 0.5 to 9.9 A for a duration of 0.1 to 9.9 seconds. The SE-100T has LO and HI outputs for 5- and 15-A resistance-grounded systems.

A test-record form is provided in Section 8 of this manual. Record the test results and test dates on this form to meet the requirements of the National Electrical Code (NEC). Retain the form so that the test data can be made available to the authority having jurisdiction.

## 4. COMPATIBILITY

The SE-105 is a direct replacement for the SEL-100, SEL-100TD, SE-101, SE-101S, SE-102, SE-102S, SE-102M, SE-103, and SE-103S. Terminal designations have been changed as shown in Table 1.

Terminals CT1 and CT2 are transformer isolated so that the CT secondary can be grounded. Units with old designations do not allow the secondary of the ground-fault CT to be grounded when the ground-check circuit is used.

TABLE 1. TERMINAL DESIGNATIONS

| OLD DESIGNATION | SE-105 DESIGNATION |
|-----------------|--------------------|
| CT              | CT1                |
| CT              | CT2                |
| (RELAY)         | A                  |
| (RELAY)         | B                  |
| L               | L1                 |
| N               | L2                 |
| SW              | SW                 |
| PL              | CI                 |
| +               | +                  |
| GL              | GI                 |
| P               | GC                 |
| G               | G                  |

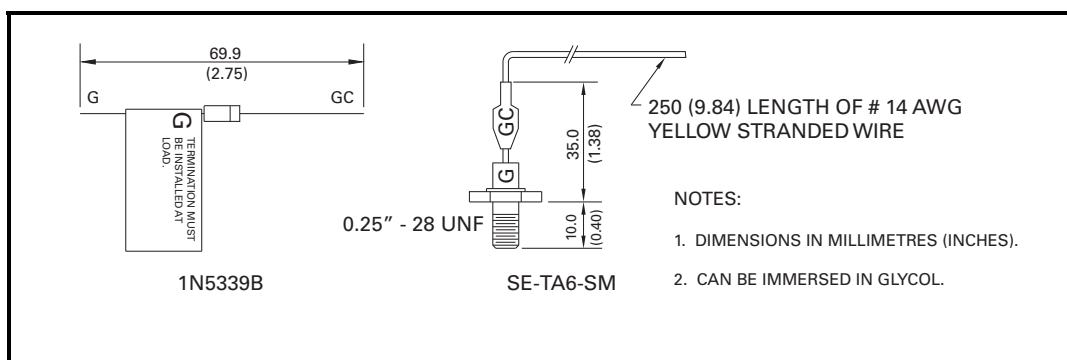


FIGURE 4. Zener-Diode Termination Devices.

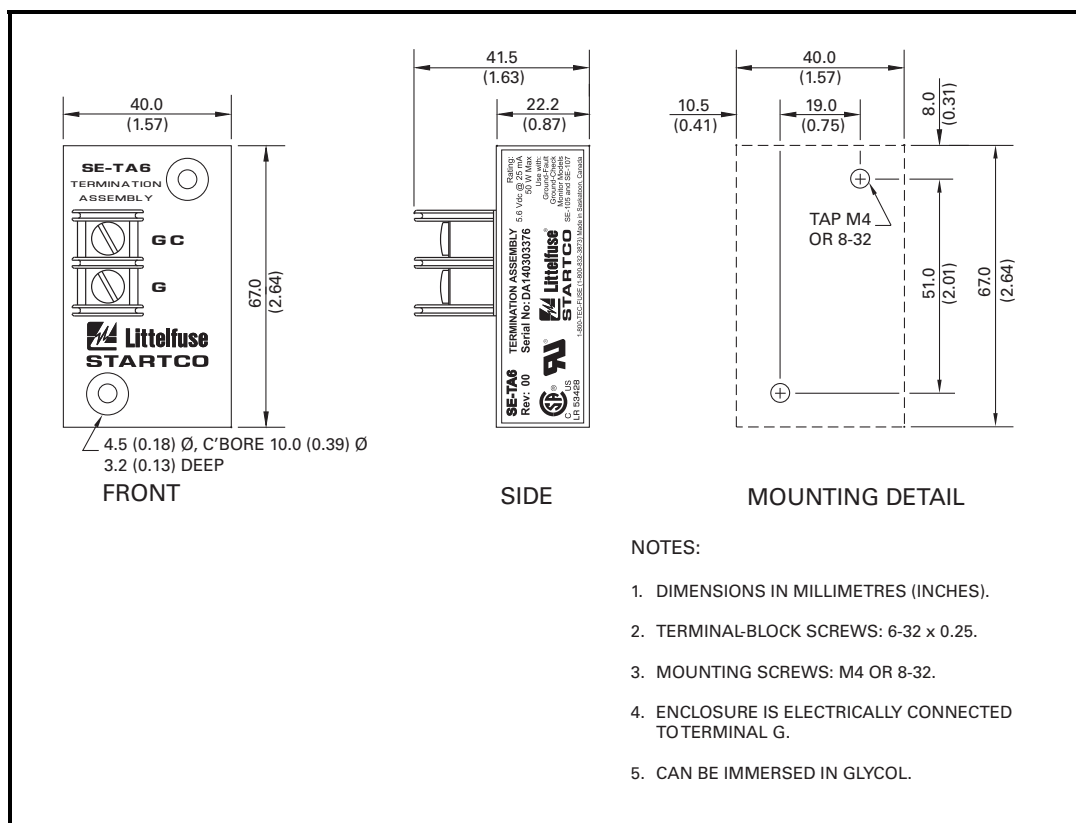


FIGURE 5. SE-TA6 Termination Assembly.

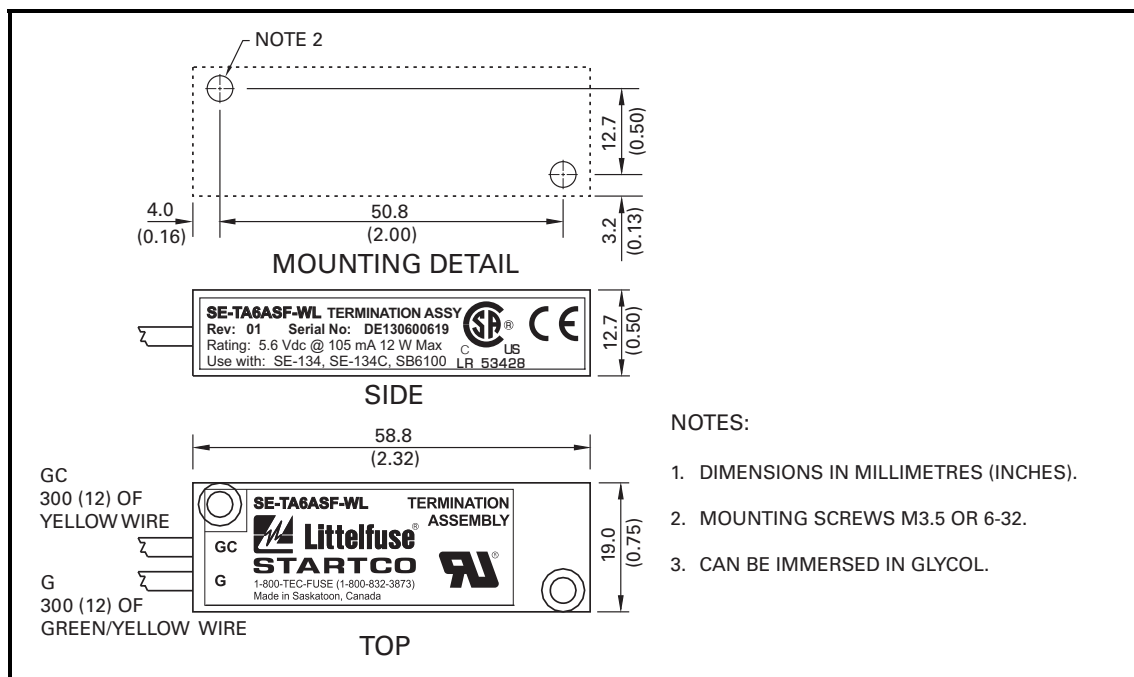


FIGURE 6. SE-TA6ASF-WL Small-Format Termination Assembly with Wire Leads.

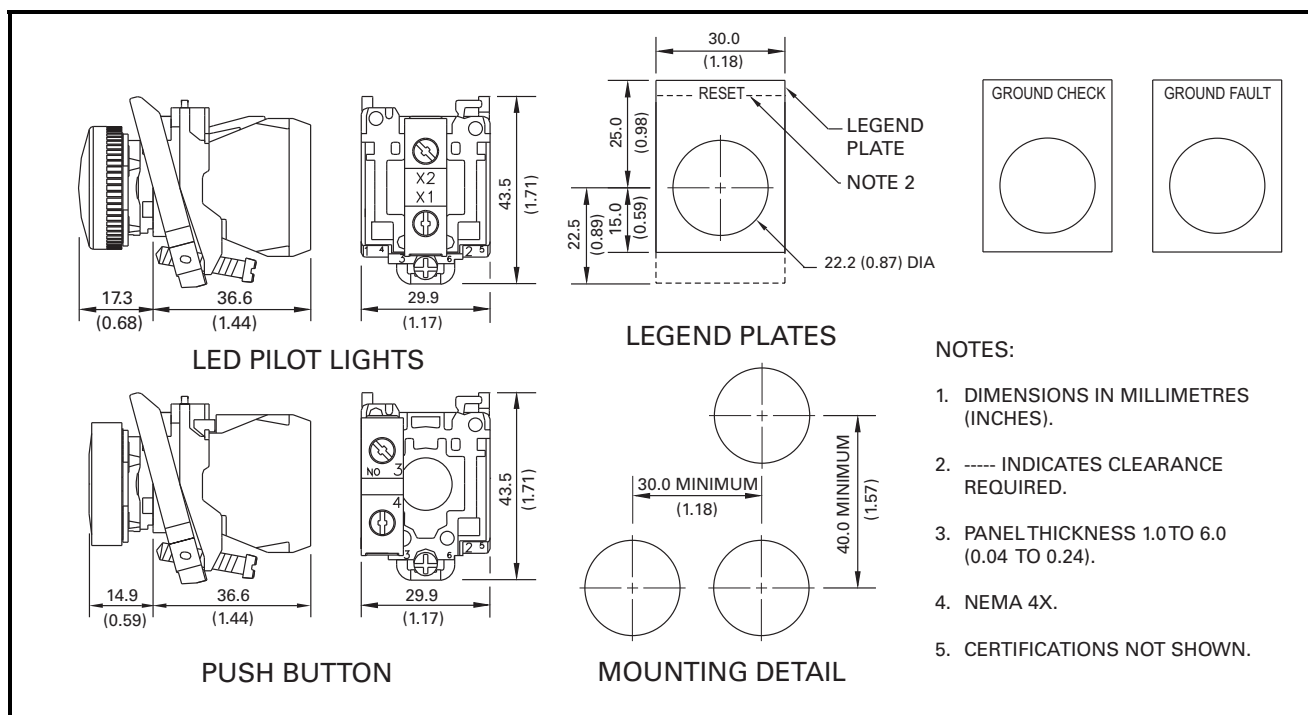


FIGURE 7. RK-102 Remote Indication and Reset Kit.

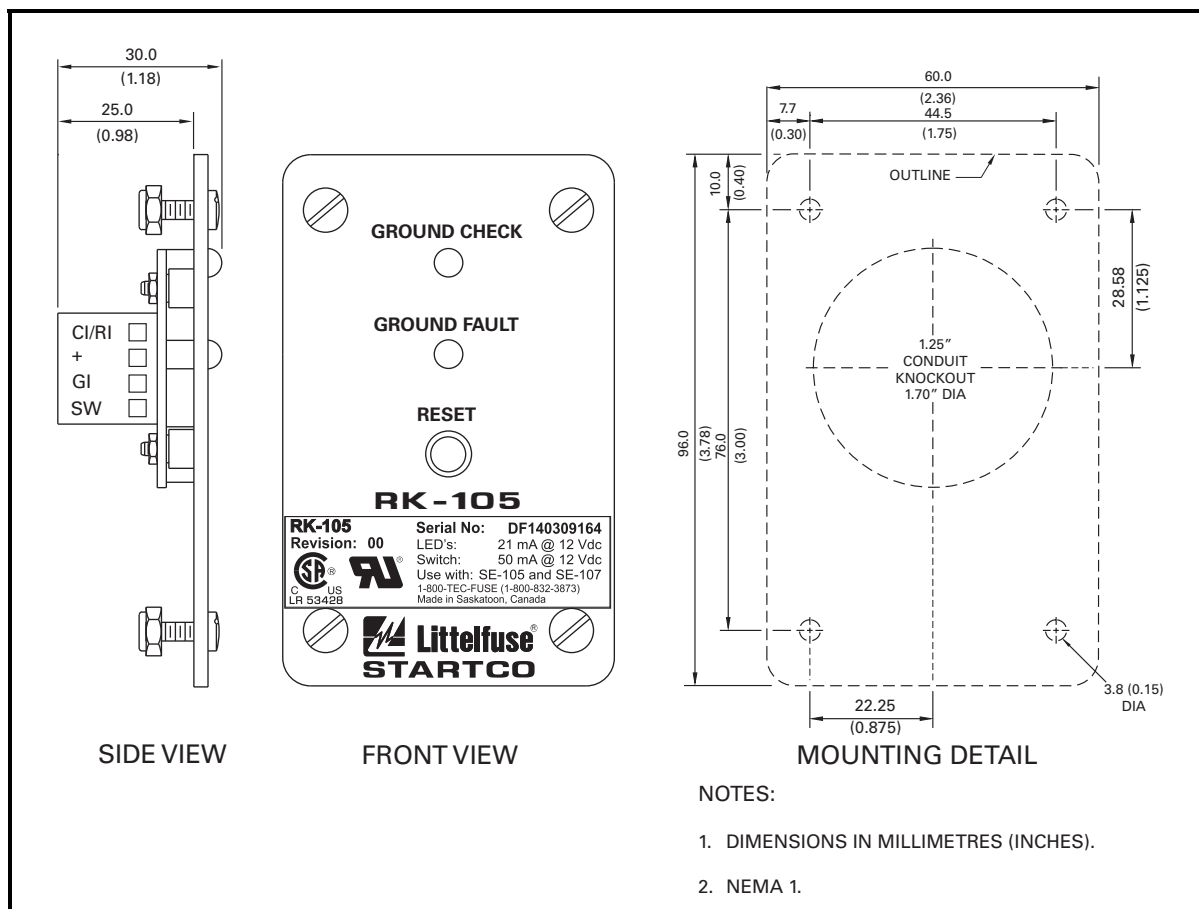


FIGURE 8. RK-105 Remote Indication-and-Reset Assembly.

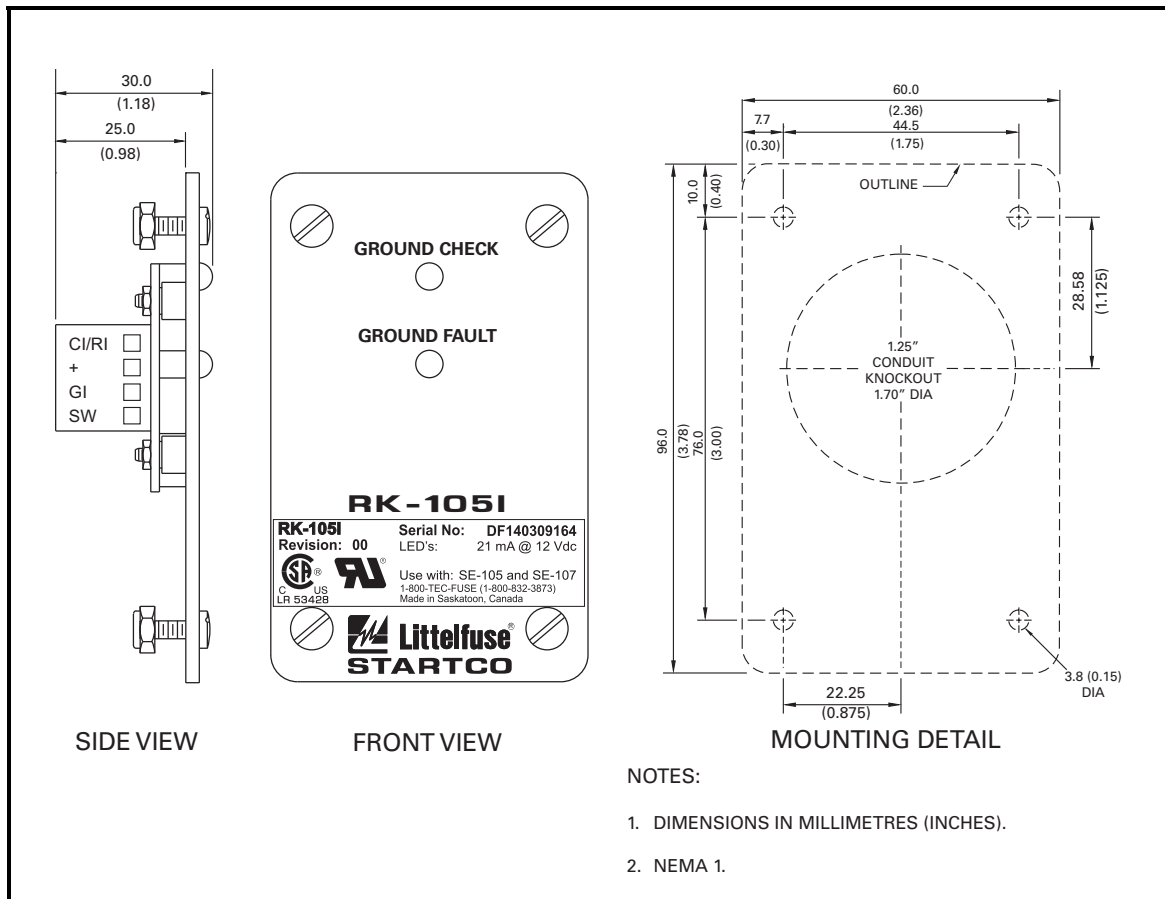


FIGURE 9. RK-105I Remote Indication Assembly.


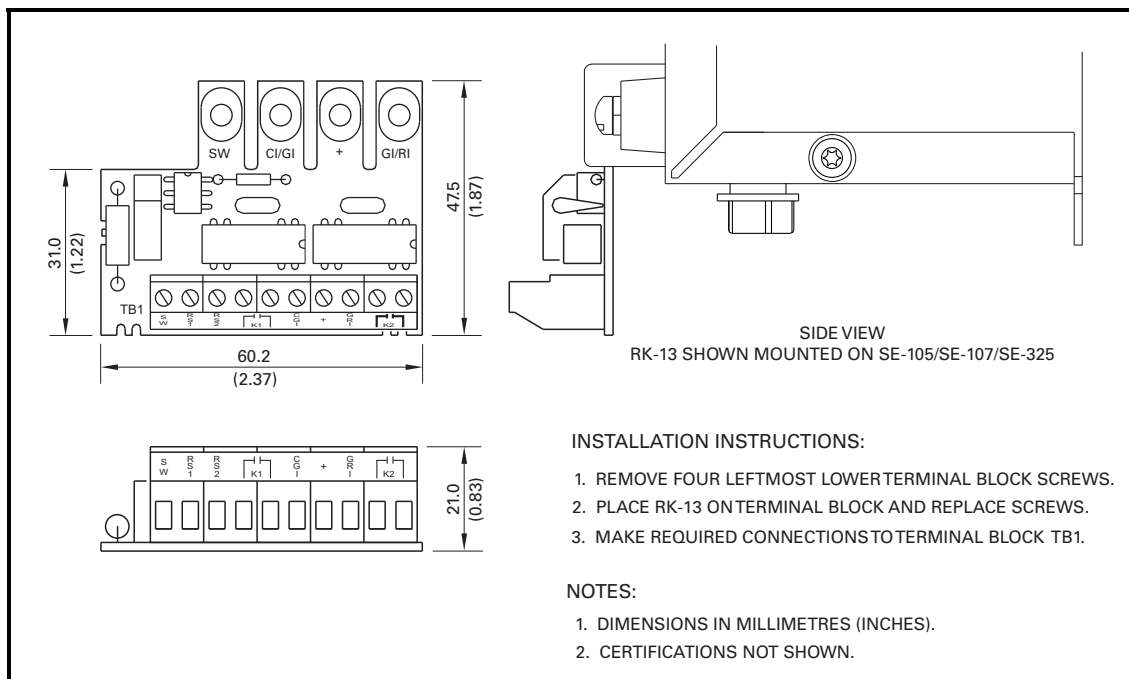



FIGURE 10. RK-13 Relay Interface Module.

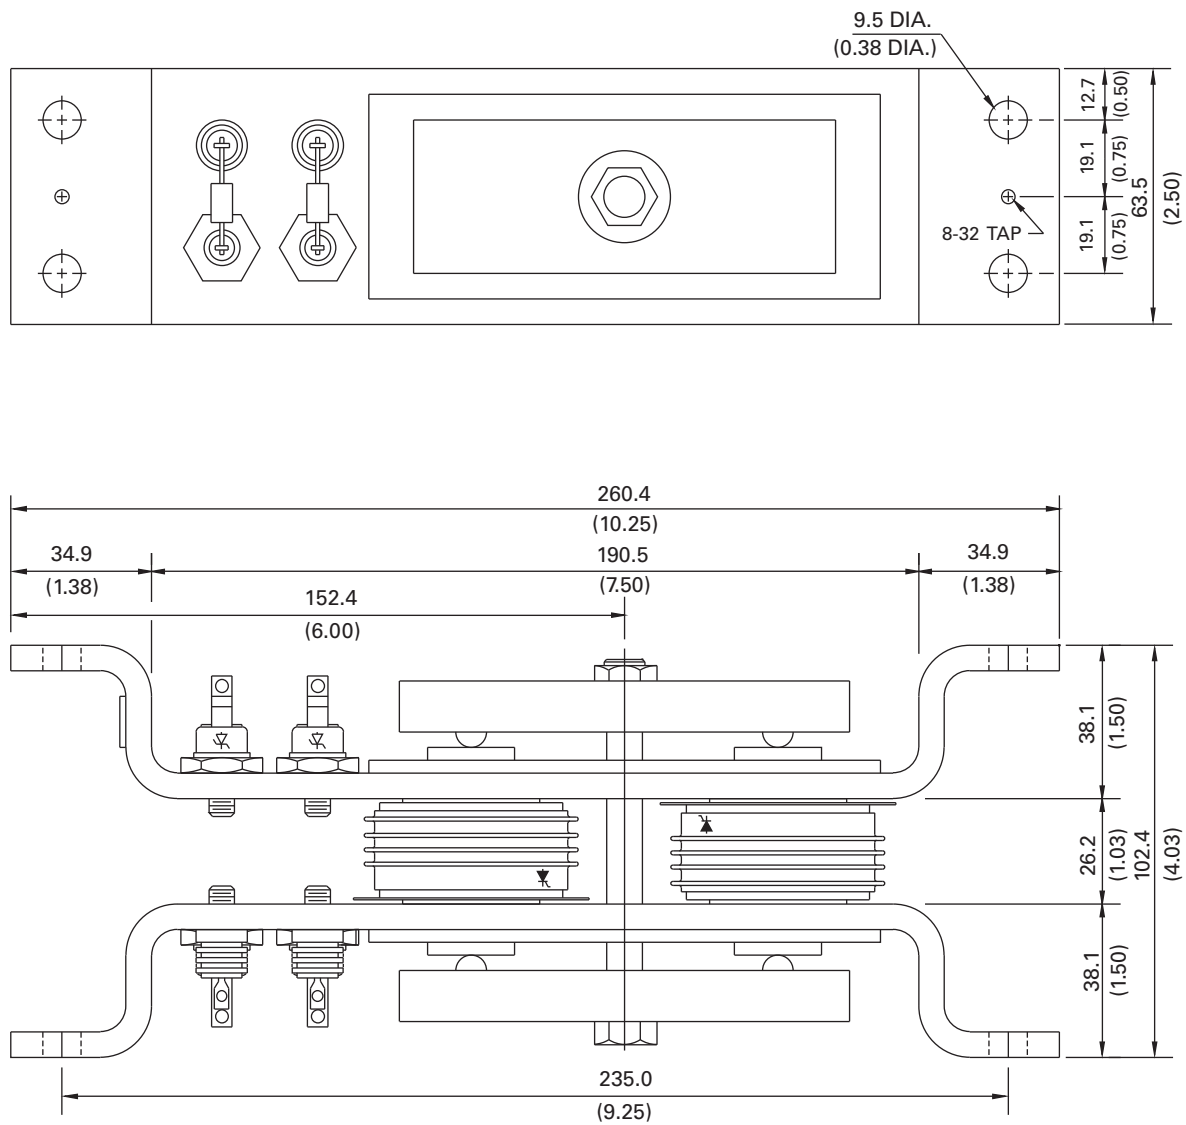

**NOTES:**

1. DIMENSIONS IN MILLIMETRES (INCHES).

FIGURE 11. PPI-600V Parallel-Path Isolator.

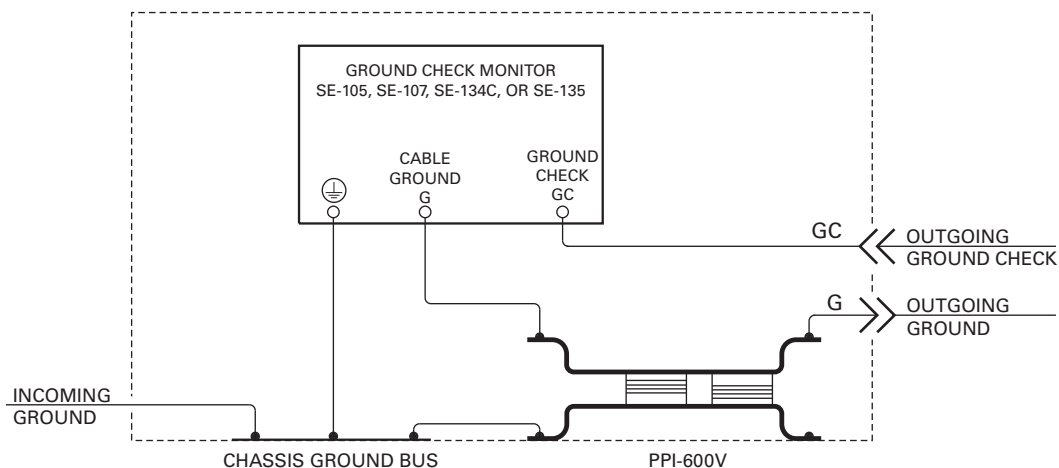

**NOTES:**

1. THE PARALLEL-PATH ISOLATOR IS NOT POLARIZED. EITHER FLANGE CAN BE CONNECTED TO CHASSIS.
2. THE OUTGOING GROUND MUST BE ISOLATED FROM THE CHASSIS GROUND BUS.  
IF A FLANGE-MOUNTED RECEPTACLE IS USED, VERIFY THAT THE FLANGE IS ISOLATED FROM THE GROUND PIN, AND
  - USE A MATING PLUG WITH A NON-METALLIC HOUSING, OR
  - ISOLATE THE FLANGE FROM THE CHASSIS IF THE MATING PLUG HAS A METALLIC HOUSING.
3. CABLE PLUGS AND RECEPTACLES WITH GROUNDED METAL HOUSING MUST BE ISOLATED FROM GROUND TO PREVENT PARALLEL GROUND PATHS.
4. FOR SYSTEMS ABOVE 600 VAC, CONNECT A V131DA40 MOV ACROSS THE PPI-600V.

FIGURE 12. PPI-600V Typical Installation.

## 5. TECHNICAL SPECIFICATIONS

### 5.1 SE-105

#### Supply:

|             |                                                                     |
|-------------|---------------------------------------------------------------------|
| ac .....    | 10 VA, 120 or 240 Vac<br>(+10, -45%), 50/60 Hz                      |
| ac/dc ..... | 5 W, 120 Vdc (+40, -8%);<br>10 VA, 120 Vac<br>(+10, -45%), 50/60 Hz |

**NOTE:** Voltage between supply terminals (L1, L2) and ground terminal (G) must not exceed 300 Vac continuous or 1,250 Vac under transient conditions.

#### Dimensions:

|              |               |
|--------------|---------------|
| Height ..... | 150 mm (5.9") |
| Width .....  | 109 mm (4.3") |
| Depth .....  | 100 mm (4.0") |

Shipping Weight..... 1 kg (2.2 lb)

#### Environment:

|                             |                            |
|-----------------------------|----------------------------|
| Operating Temperature ..... | -40 to 60°C (-40 to 140°F) |
| Storage Temperature .....   | -55 to 80°C (-67 to 176°F) |
| Humidity .....              | 85% Non-Condensing         |

#### Ground-Fault Circuit:

|                                         |                                      |
|-----------------------------------------|--------------------------------------|
| CT Ratio .....                          | 200:5                                |
| CT Input Burden .....                   | 0.02 $\Omega$                        |
| Trip Level <sup>(1)</sup> .....         | 0.5, 2.0, or 4.0 A                   |
| Frequency Response .....                | 25 to 110 Hz                         |
| Trip Time .....                         | 0.1 to 2.0 s                         |
| Thermal Withstand <sup>(1)</sup> .....  | 200 A Continuous,<br>2,500 A for 2 s |
| Trip-Level Accuracy .....               | +10, -20%                            |
| CT Lead Resistance Limit <sup>(2)</sup> |                                      |
| 0.5 A Trip Level .....                  | 2 $\Omega$                           |
| 2 A Trip Level .....                    | 5 $\Omega$                           |
| 4 A Trip Level .....                    | 5 $\Omega$                           |
| Trip-Time Accuracy .....                | 10%                                  |
| Trip Mode .....                         | Latching                             |

#### Ground-Check Circuit:

|                            |                                                      |
|----------------------------|------------------------------------------------------|
| Open-Circuit Voltage ..... | 12 Vdc                                               |
| Output Impedance .....     | 240 $\Omega$                                         |
| Nominal Loop Current ..... | 25 mA                                                |
| Induced-ac Withstand ..... | 25 Vac Continuous,<br>120 Vac for 3 s                |
| Fuse Rating (F2) .....     | 0.5 A, 250 Vac,<br>Time Delay                        |
| Fuse Part Number .....     | Littelfuse 313.500 or<br>Bussman MDA-1/2,<br>MDL-1/2 |
| Pull-in Filter .....       | Chopper Rejection                                    |
| Pull-in Time .....         | 1.5 s                                                |

|                                      |                                           |
|--------------------------------------|-------------------------------------------|
| Trip Time .....                      | 0.2 s (GC open),<br>0.5 s (GC to G short) |
| Trip-Time Accuracy .....             | +10, -30%                                 |
| GC-Loop                              |                                           |
| Trip Resistance <sup>(3)</sup> ..... | 40 $\pm$ 10 $\Omega$                      |
| Trip Mode .....                      | Non-Latching,<br>Latching with Option L   |

#### Output Relay:

CSA/UL Contact Ratings ... 1 mA to 4 A Resistive,  
240 Vac or 28 Vdc

#### Supplemental Contact Ratings:

|                        |      |
|------------------------|------|
| Make/carry 0.2 s ..... | 10 A |
| Carry continuous ..... | 4 A  |

#### Break:

|          |                                                   |
|----------|---------------------------------------------------|
| dc ..... | 20 W Resistive,<br>10 W Inductive<br>(L/R=0.04 s) |
| ac ..... | 960 VA Resistive,<br>700 VA Inductive<br>(PF=0.4) |

Subject to maximums of 4 A and 240 V (ac or dc)

Contact Configuration ..... N.O. (Form A)

Fuse Rating (F1)..... 4.0 A, 250 Vac,  
Time Delay

Fuse Part Number ..... Littelfuse 313004. or Bussman MSL-4 |

Operating Mode..... UV (Undervoltage/Fail-Safe) or SH (Shunt Trip/Non-Fail-Safe)

#### Remote Indication:

|             |                                        |
|-------------|----------------------------------------|
| + .....     | 12 Vdc                                 |
| GI/CI ..... | Current Sink,<br>560 $\Omega$ Internal |

#### Optional RK-13 Module:

|                             |                                            |
|-----------------------------|--------------------------------------------|
| Contact Ratings .....       | 0.08 A, 120 V (ac or dc)<br>0.50 A, 24 Vdc |
| Contact Configuration ..... | N.O. (Form A)                              |
| Reset Input .....           | 24 to 120 V (ac or dc),<br>Isolated        |

PWB Conformal Coating..... MIL-1-46058 qualified,  
UL QMJU2 recognized

Certification.....CSA, Canada and USA



UL Listed


Australia<sup>(4)</sup>


## NOTES:

- (1) Currents referred to primary of CT200 for prospective ground-fault currents less than 4,000 A.
- (2) Typical maximum CT lead resistance to meet specified trip-level accuracy.
- (3) The GROUND CHECK LED may flash when the GC-loop trip resistance is near the trip level.
- (4) Applicable only on 240 Vac Supply (Option E in the ordering information).

## 5.2 CURRENT SENSORS

### Environment:

Operating Temperature..... -40 to 60°C (-40 to 140°F)  
Storage Temperature..... -55 to 80°C (-67 to 176°F)  
Humidity..... 85% Non-Condensing

### CT200:

Current Ratio ..... 200:5 A  
Insulation ..... 600-V Class  
Window Diameter ..... 56 mm (2.2")  
Shipping Weight..... 1 kg (2.2 lb)

### CT200L:

Current Ratio ..... 200:5 A  
Insulation ..... 600-V Class  
Window Diameter ..... 89 mm (3.5")  
Shipping Weight..... 1 kg (2.2 lb)

## 5.3 TERMINATION ASSEMBLIES

### SE-TA6:

Characteristic ..... Zener Diode,  
Unidirectional  
Circuit Type ..... High Current Shunt  
Regulator  
Reverse Voltage..... 5.6 ± 0.3 Vdc @ 25 mA  
Forward Voltage..... 0.65 ± 0.1 Vdc @ 25 mA  
Operating Temperature ..... -40 to 60°C (-40 to 140°F)  
Power Rating ..... 50 W  
Screw Terminal ..... 6-32 x 0.25"

Dimensions..... 67 x 40 x 41.5 mm  
(2.6 x 1.6 x 1.6")  
Shipping Weight ..... 200 g (0.45 lb)


### SE-TA6ASF-WL:

Characteristic..... 6-V Zener, Temperature  
Compensated  
Circuit Type..... High-Current Shunt  
Regulator  
Reverse Voltage ..... 5.6 ± 0.03 Vdc @ 100 mA  
Forward Voltage..... 0.5 ± 0.1 Vdc @ 100 mA  
Operating Temperature..... -40 to 60°C (-40 to 140°F)  
Current Range ..... 2 mA to 15 A  
Maximum Clamping  
Voltage ..... 55 V @ 250 A,  
5x20 µs Pulse  
Power Rating ..... 12 W  
Wire Leads ..... 18 AWG (0.82 mm<sup>2</sup>),  
300 mm (11.8")  
Dimensions..... 58.8 x 19 x 12.7 mm  
(2.32 x 0.75 x 0.5")  
Shipping Weight..... 45 g (0.1 lb)

### SE-TA6-SM:

Characteristic..... Zener Diode,  
Unidirectional  
Circuit Type..... High Current Shunt  
Regulator  
Reverse Voltage ..... 5.6 ± 0.3 Vdc @ 25 mA  
Forward Voltage ..... 0.65 ± 0.1 Vdc @ 25 mA  
Operating Temperature ..... -40 to 60°C (-40 to 140°F)  
Power Rating ..... 50 W  
Screw Terminal ..... 0.25" – 28 UNF  
Dimensions:  
Body ..... 45 mm  
Wire Lead..... 250 mm (9.84")  
14 AWG (2.08 mm<sup>2</sup>)  
Shipping Weight ..... 45 g (0.1 lb)

## 6. ORDERING INFORMATION

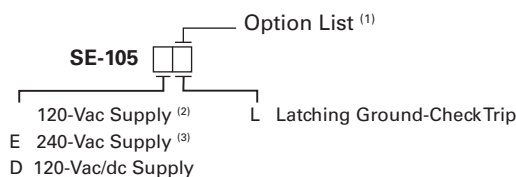

Each SE-105 is supplied with a 1N5339B termination device.

<sup>(1)</sup> List options required in order shown above.

<sup>(2)</sup> Standard, leave blank.

<sup>(3)</sup> Only Supply option available with C-Tick certification.

### Ground-Fault CT's:

CT200 ..... 56 mm (2.2") window  
CT200L..... 89 mm (3.5") window

Ground-Check Termination:

|                    |                                                              |
|--------------------|--------------------------------------------------------------|
| 1N5339B .....      | 5-W Axial Lead<br>Termination Device                         |
| SE-TA6.....        | 50-W Termination<br>Assembly                                 |
| SE-TA6-SM.....     | 50-W Stud-Mount<br>Termination Assembly                      |
| SE-TA6ASF-WL ..... | 12-W Small-Format<br>Termination Assembly<br>with Wire Leads |

Remote Indication and Reset:

|              |                                                                             |
|--------------|-----------------------------------------------------------------------------|
| RK-102 ..... | Includes two LED pilot<br>lights, a reset push button,<br>and legend plates |
| RK-105 ..... | Indication-and-Reset<br>Assembly                                            |
| RK-105I..... | Indication Assembly                                                         |
| RK-13 .....  | Relay Interface Module                                                      |

Parallel-Path Isolator:

|                |                                      |
|----------------|--------------------------------------|
| PPI-600V ..... | For system voltages up to<br>600 Vac |
|----------------|--------------------------------------|

## 7. WARRANTY

The SE-105 Ground-Fault Ground-Check Monitor is warranted to be free from defects in material and workmanship for a period of five years from the date of purchase.

Littelfuse Startco will (at Littelfuse Startco's option) repair, replace, or refund the original purchase price of an SE-105 that is determined by Littelfuse Startco to be defective if it is returned to the factory, freight prepaid, within the warranty period. This warranty does not apply to repairs required as a result of misuse, negligence, an accident, improper installation, tampering, or insufficient care. Littelfuse Startco does not warrant products repaired or modified by non-Littelfuse Startco personnel.

Retain this record for the authority having jurisdiction.

## APPENDIX A SE-105 REVISION HISTORY

| MANUAL<br>RELEASE DATE | MANUAL<br>REVISION | PRODUCT REVISION<br>(REVISION NUMBER ON PRODUCT LABEL) |
|------------------------|--------------------|--------------------------------------------------------|
| May 3, 2015            | 13-D-050315        | 13                                                     |
| April 29, 2015         | 13-C-042915        |                                                        |
| September 8, 2014      | 13-B-090814        | 12                                                     |
| July 4, 2013           | 13-A-070413        |                                                        |

### MANUAL REVISION HISTORY

#### REVISION 13-D-050315

##### SECTION 5

FCC certification added.  
Updated Fuse F1 part number.  
Sections 5.2 and 5.3 added.

##### APPENDIX A

Revision history updated.

#### REVISION 13-C-042915

##### SECTION 5

Updated Fuse F1 part number.

##### APPENDIX A

Revision history updated.

#### REVISION 13-B-090814

##### SECTION 3

Updated Figure 1.

##### SECTION 4

Updated Figures 5, 6, 8, and 9.

##### SECTION 5

Updated RK-13 contact ratings.  
Updated notes.

##### APPENDIX A

Revision history updated.

#### REVISION 13-A-070413

##### SECTION 3

Updated Figure 1.

##### SECTION 4

Updated Figure 7.

##### APPENDIX A

Revision history added.

### PRODUCT REVISION HISTORY

#### REVISION 13

Minor hardware change.

#### REVISION 12

No change.