

# Motor and Pump Protection Relays

## 111-INSIDER-P

### Single-Phase Pump Monitor



## Description

The single-phase 111-Insider-P monitor fits inside 1/3 and 1/2 hp, 115 V control boxes. It is designed to protect single-phase, submersible pumps from dry-well, dead-head, jammed impellers, rapid-cycle, overvoltage, and undervoltage conditions. A calibration adjustment allows the Insider to be calibrated to your specific pumping applications, reducing the possibility of false or nuisance tripping. A unique microcontroller-based voltage and current-sensing circuit constantly monitors the incoming power for fluctuations, overcurrent, and undercurrent. When an abnormality such as loss of suction is detected, the product deactivates its output relay and directly disconnects the pump motor. The relay then begins its user-selectable restart delay (dry-well recovery) timer. When the timer counts to zero or power is removed and reapplied, the relay reactivates its output relay and turns the pump back on. By leaving the restart delay knob in the reset position, the relay will operate in manual reset mode.

The Insider communicates with a hand-held diagnostics tool called the Informer (sold separately). The Informer displays parameters including calibration points, trip points, run time and last faults. An IR Kit-12 (12" fiber optic kit) is included with each Insider, allowing the Informer to access these parameters even when the Insider is enclosed in a control box. This is valuable for troubleshooting the pump while it is running.

NOTE: The 111-Insider-P model has a sensitivity adjustment for the dry-well trip point. After calibration is done, you can adjust the sensitivity for the dry-well/dead-head trip point from 70–90 % of the full load. This makes the unit even more adaptable to varying pumping applications. If you have a very low producing well, increase the sensitivity closer to the 90 % mark, or if you have a very heavy producing well, decrease the sensitivity around the 70 % mark.

## Features & Benefits

FEATURES	BENEFITS
<b>Proprietary microcontroller-based circuitry</b>	Constant monitoring of voltage and current protects pumps from fault conditions
<b>Onboard sensitivity adjustment</b>	Allows user to adjust the current sensitivity for the dry-well/dead-head trip point from 70 %–90 % of the full load
<b>Adjustable restart delay</b>	Allows user to select well recovery time delay after a dry-well condition occurs, or to select manual reset
<b>Built-in IR communications link</b>	Used with the Informer, allows user to see stored faults, run time, and also troubleshoot the pump while it's running
<b>LED indication</b>	Provides status and diagnostics for troubleshooting

## Applications

- Made for submersible pump systems

# Motor and Pump Protection Relays

111-INSIDER-P

## Specifications

### Functional Specifications

#### Adjustments/Settings

<b>Overcurrent</b>	125 % of calibration point
<b>Underload (dry-well)</b>	Adjustable (70 to 90 % of calibrated run power)
<b>Overvoltage</b>	132.5 V ac
<b>Undervoltage</b>	95 V ac

**Number of restarts allowed in a 60-sec. period (rapid-cycling)** 4

#### Trip Delay Times

<b>Overcurrent</b>	5 seconds
<b>Dry-well</b>	4 seconds

#### Restart Delay Times

<b>Over/Undervoltage</b>	2 seconds
<b>All other faults</b>	Manual, 2–25 minutes

### Input Characteristics

**Supply Voltage** 115 V ac

**Load Range** 1/3–1/2 hp

**Frequency** 50/60 Hz (*Note: 50 Hz will increase all delay timers by 20 %*)

### Output Characteristics

**Output Contact Rating-SPST** 1/2 hp @ 120 V ac (17 A max.)

### General Characteristics

**Operating Temperature** -40 °C to 55 °C (-40 °F to 131 °F)

**Maximum Input Power** 5 W

**Weight** 10 oz.

**Mounting Methods** Inside a Pentek\*, Franklin\*, CentriPro\*, Grundfos\* (mfg after mid-2014), Flowise Pro,\* and Flint and Walling\* control box

## Certification & Compliance

cURus\*\*

UL 508, C22.2 No. 14

## Accessories

### Informer

A hand-held diagnostic tool that uses an infrared receiver to access information which can be helpful for troubleshooting the system. Includes the Informer IR Kit-12

### Informer IR Kit-12

12" infrared adapter cable attaches to the face of the unit to provide remote diagnostics without opening the panel. Included with the Informer

## Ordering Information

MODEL	VOLTAGE	DESCRIPTION
111-Insider-P 115 V ac 1/3–1/2 hp, includes IR Kit-12	230 V ac	1/3–1 hp, includes IR Kit-12

\*Pentek, Franklin, Grundfos, Flowise Pro, and Flint and Walling are trademarks of their respective owners.


\*\*The 111-Insider-P is an agency approved type 3R control box when installed as described in the installation instructions. The 111-Insider-P is not intended to provide overload protection, and should be used with thermally or impedance protected motors only.

# Motor and Pump Protection Relays


## 111-INSIDER-P

### Wiring Diagrams


PENTEK\* CONTROL BOX WIRING DIAGRAM

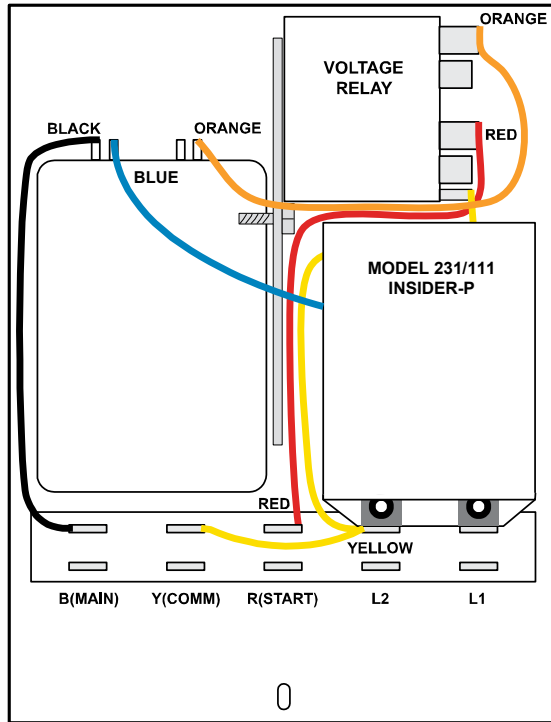


FRANKLIN\* CONTROL BOX WIRING DIAGRAM

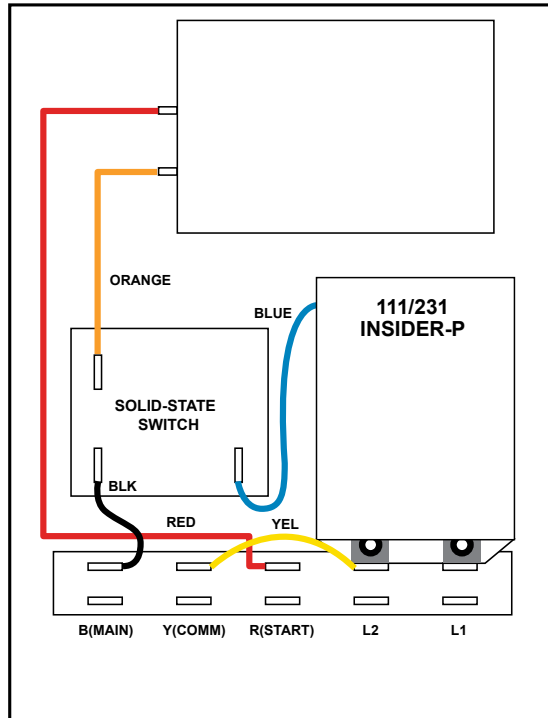

CENTRIPRO\* CONTROL BOX WIRING DIAGRAM

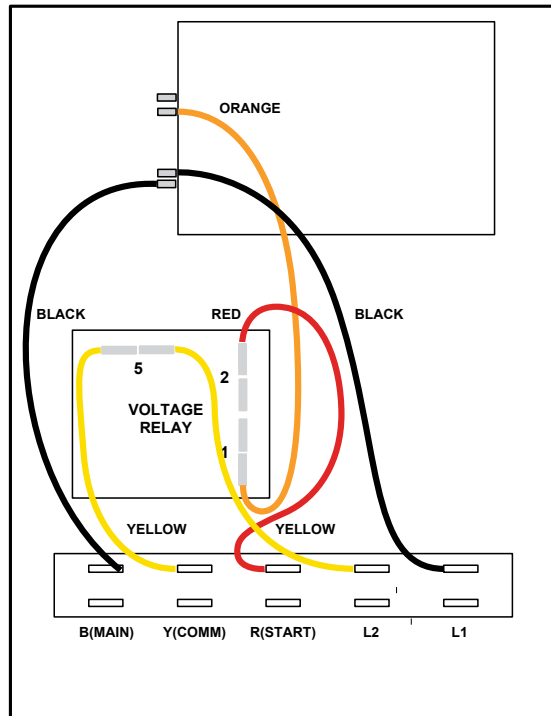

FLINT AND WALLING\* CONTROL BOX WIRING DIAGRAM

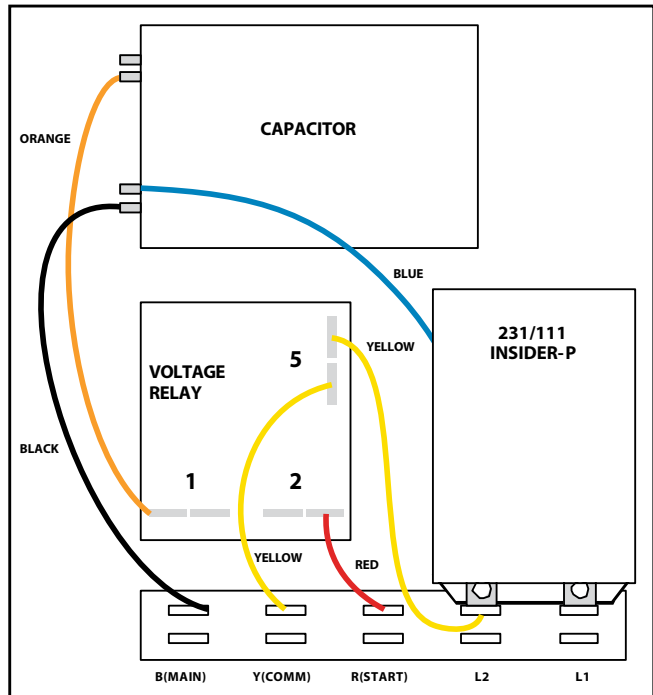


# Motor and Pump Protection Relays


## 111-INSIDER-P

### Wiring Diagrams

GRUNDFOS\*\* CONTROL BOX WIRING DIAGRAM

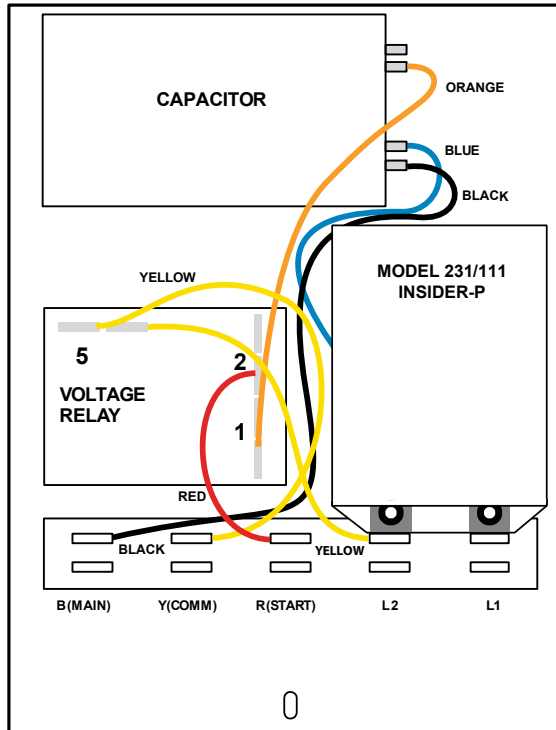

FLOWISE PRO\* CONTROL BOX WIRING DIAGRAM

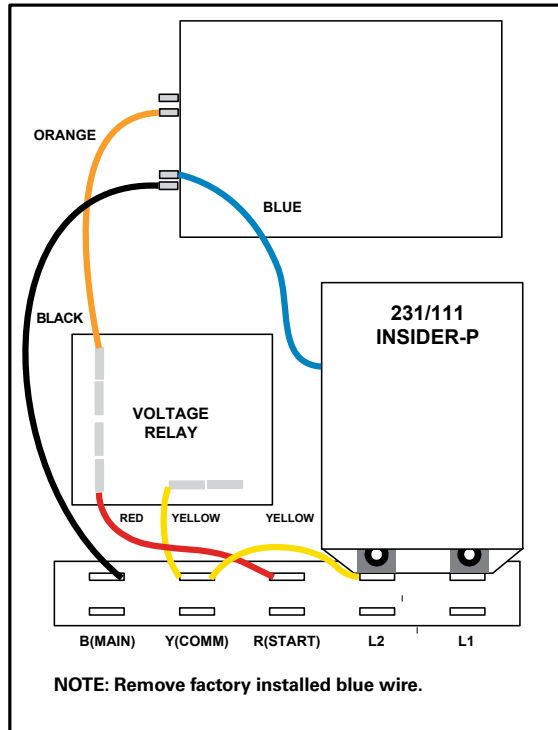

\*\*For boxes manufactured in mid 2014 or later.  
See 232-INSIDER for boxes manufactured prior to mid 2014.

For installation instructions see the Fresh Water Pumping Catalog.

\*Pentek, Franklin, Grundfos, Flowise Pro, and Flint and Walling are trademarks of their respective owners.

**Disclaimer Notice** – Information furnished is believed to be accurate and reliable. However, users should independently evaluate the suitability of and test each product selected for their own applications. Littelfuse products are not designed for, and may not be used in, all applications. Read complete Disclaimer Notice at [www.littelfuse.com/product-disclaimer](http://www.littelfuse.com/product-disclaimer).